


# **Precision Reduction Gear RV**™

**Turntable Gearhead** 

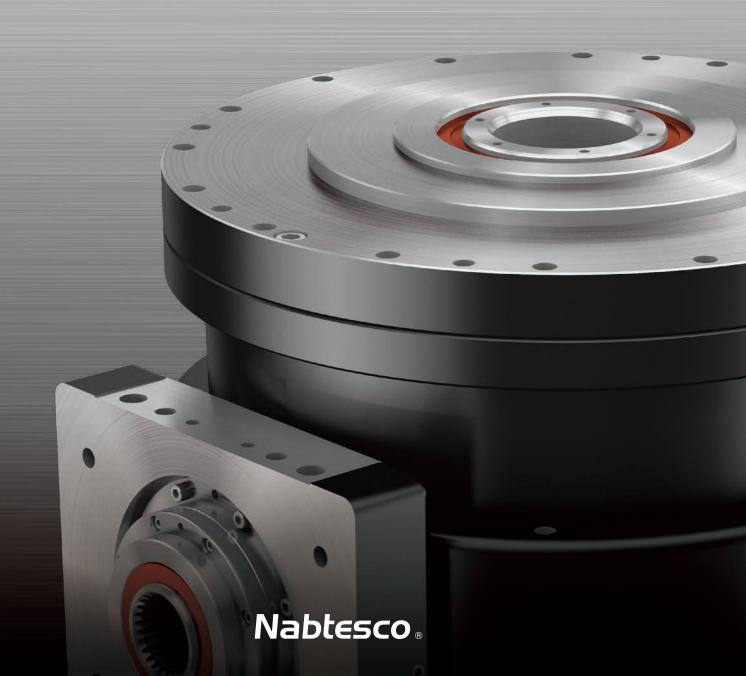






# Contributing to society with our 'Moving it. Stopping it.' technologies

Nabtesco manufactures products which are used in everyday life. Our high-accuracy components are essential for moving objects; they may be rarely visible, but are the foundation of everyday objects that you see moving and wonder how. Nabtesco's technologies are found throughout objects that move and stop people's lives.

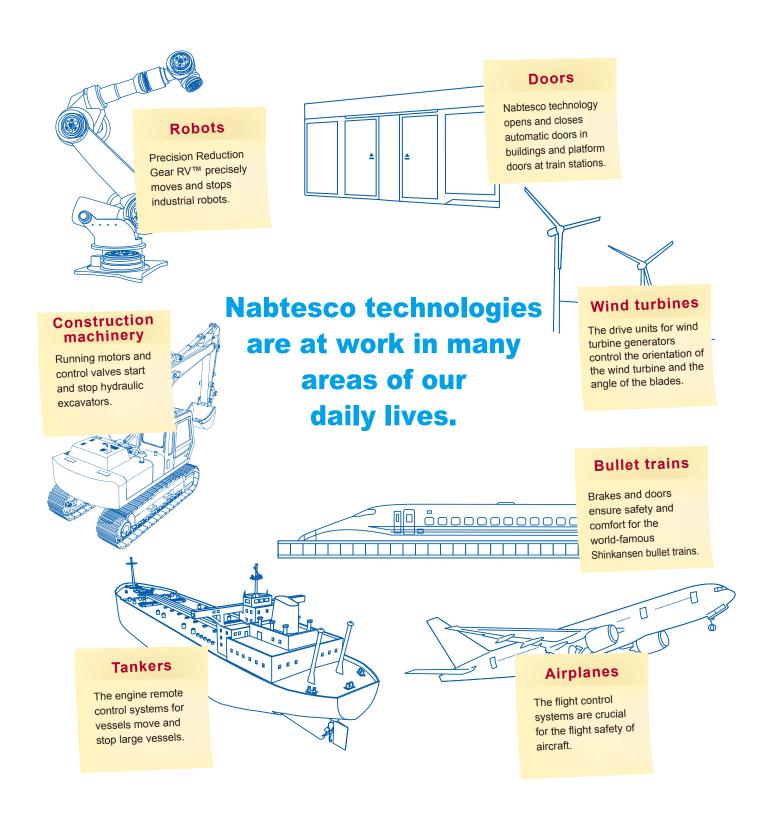

# CONTENTS

# Who is Nabtesco?

The key words for Nabtesco are 'motion control'. We use our strengths in the fields of component and systems technologies to develop highly creative products. Through the Nabtesco Group as a whole, we can also utilize our advantage of expertise to maximum effect in order to further enhance these strengths.

In the air, on land and at sea, we have a leading share in various fields of both international and domestic markets.

Nabtesco will continue to evolve by utilizing its strengths in many fields and by exploring the possibilities of the future.



Teijin Seiki Co., Ltd. Established 1944

Business Merger in 2003

**Motion control** 




April 2002 Initiation of hydraulic equipment business alliance October 2003 Business merger

The business alliance between Teijin Seiki and NABCO on hydraulic equipment projects was the beginning of a mutual confirmation by the companies of the other's product configuration, core technologies, corporate strategies and corporate culture. This led to a common recognition that a business merger would be an extremely effective means of increasing corporate value and achieving long-term development. Based on this mutual judgment, in 2003 an equity transfer was conducted to establish Nabtesco as a pure holding company, with both firms as wholly owned subsidiaries. After a year of preparation, both companies were absorbed and amalgamated by means of a short form merger, and Nabtesco was transitioned to an operating holding company.

What is the RS series?	?	02 –	03
Advantages of RS seri	es	04 –	07
Main RS series applica	ations		08
RS series model code			09
Rating table			10
External dimensions	Reduction gear main unit	11 —	18
	Input spline	19 –	21
	Motor flange	22 –	23
<b>Technical Information</b>	1		
Considering the use o	f the RS series		26
Glossary			27
Product selection			
Product selection flow	<i>ı</i> chart		28
Model code selection		29 –	
Allowable moment dia			37
Allowable moment ula	iyiaiii		37
Technical data			0.0
No-load running torqu	l <b>e</b>		38
Calculation of tilt angle	e and torsion angle		39
Design points			
Reduction gear install	ation components	40 –	41
Appendix			
Inertia moment calcul	ation formula		42
Troubleshooting checl	ksheet		43
Order Information She	et		44
Warranty		Back in	side over
<u></u>			


# RS Series Eliminates Turntable Problems!

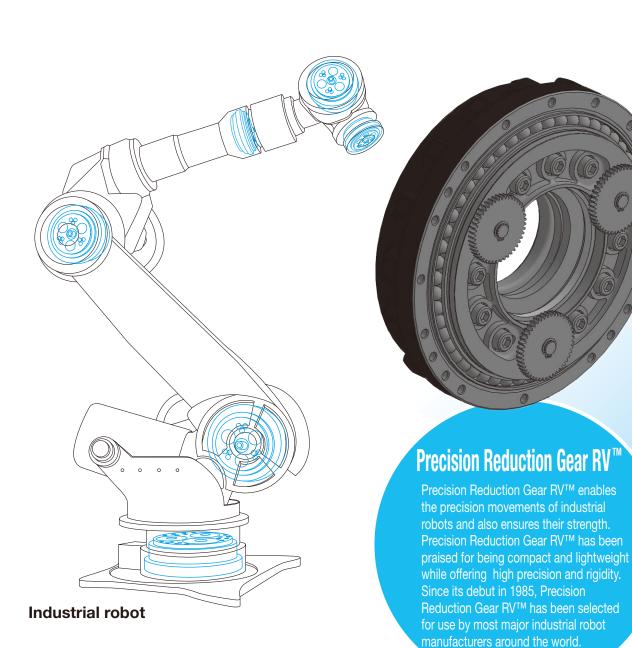




# **Advantages of RS series**


# More components increase assembly and adjustment times...

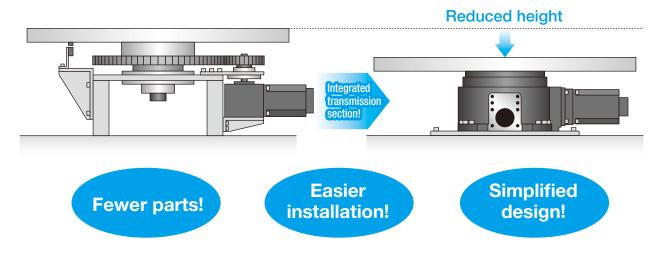

# Want lower equipment even further...

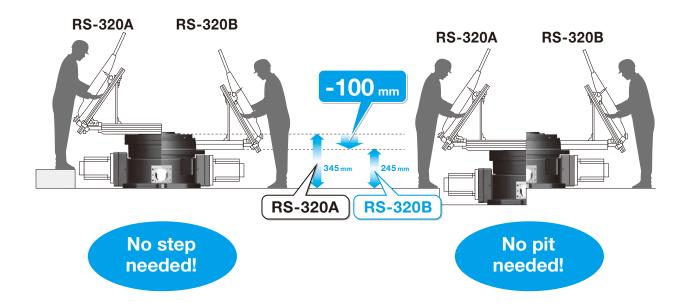


# Individual features of RS series

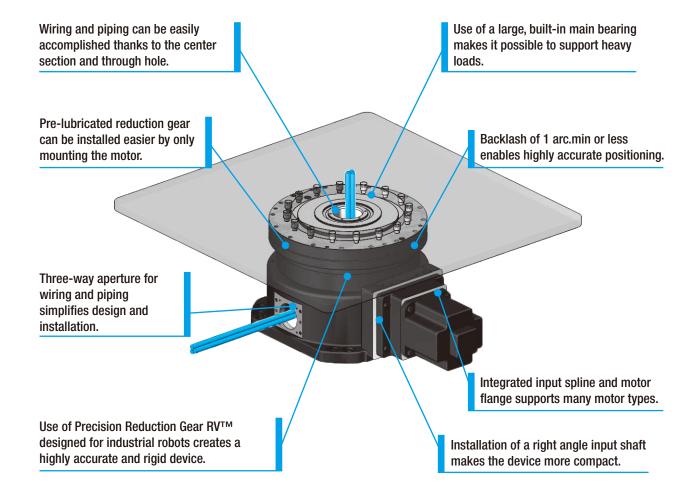


# Structure and rotation directions


# RS-50A/RS-50B

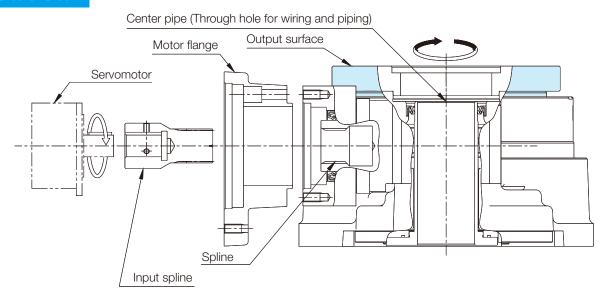


# RS-260A/RS-260B

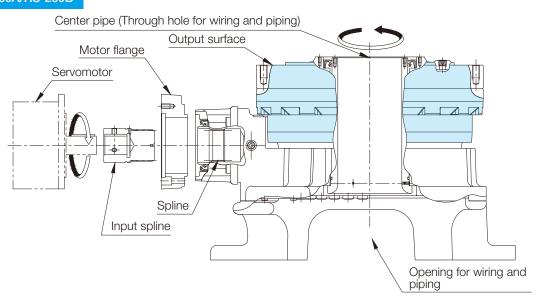

# RS-320A/RS-320B/RS-400A

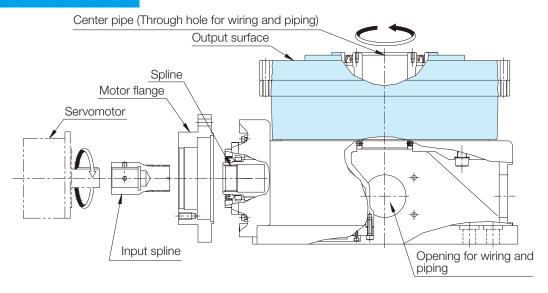


# RS-900A

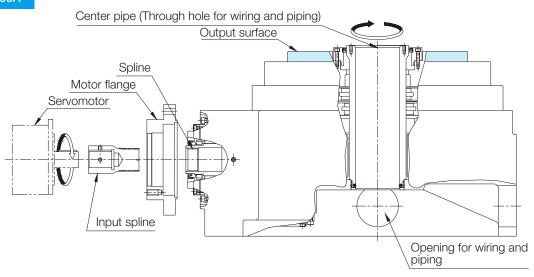


With the RS-260A/260B, RS-320A/320B/400A and RS-50A/50B, RS-900A, the rotation direction of the output shaft and servo motor differs.

Note: The areas indicate output rotation sections.

# **Main RS series applications**

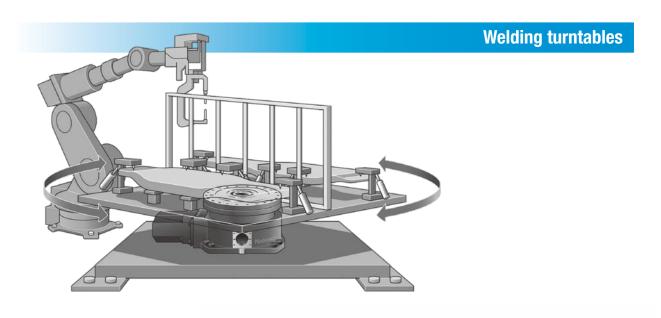


# **Index tables**

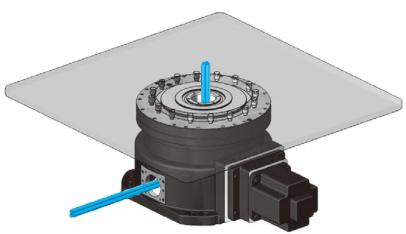



# **RS** series model code

# **Product code**

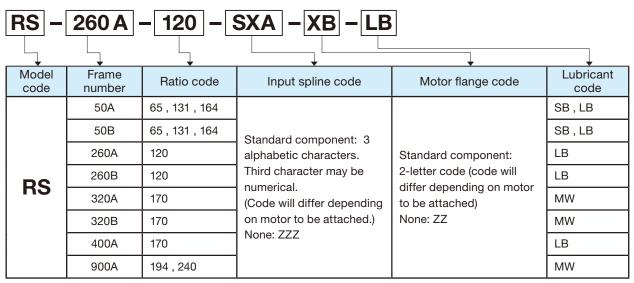


The lubricant code varies with the frame number. For the lubricants, refer to page 41.

# How to select model code

 Check the thickness of the motor flange according to the following equation:

Thickness of motor flange D = (A' + LR - L) - LL

Model	LL
Code	Input Spline Insertion Amount (mm)
RS-50A	40
RS-50B	40
RS-260A	57
RS-260B	57
RS-320A	
RS-320B	20.5
RS-400A	
RS-900A	20.5

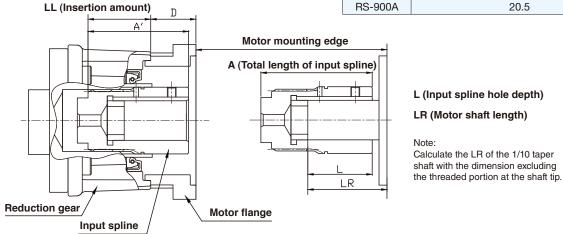

Note: Refer to page 19 to 21 regarding length A' and select a spline within the numerical range.

### Combination of reduction gear and servomotor

- 1. The combinations that satisfy the following equation are recommended. (Rated torque of motor x 0.5) < {Rated torque of reduction gear/(Speed ratio x 0.8)} < (Rated torque of motor x 1.5)
- Select the combinations that satisfy the following equation.
   (Maximum torque of motor) < {Momentary maximum torque of reduction gear/(Speed ratio x 0.8)}</li>
- 3. Limitation must be imposed to the motor torque when the condition indicated in 1 and 2 above cannot be satisfied.
- 4. For more precise motor selection, the effective torque, load inertia moment, brake torque, regenerative ability, and so forth, must also be considered.


# **Rating table**

Model				RS	S-50A/RS-5	0B	RS-260A/ RS-260B	RS-320A/ RS-320B	RS-400A	RS-9	900A	
	Speed ratio	R		65.4	130.8	163.5	120	170	170	193.6	240	
	Ratio code			65	131	164	120	170	170	194	240	
	Rated torque	То	Nm		490		2,548	3,136	3,920	8,820		
	Rated output speed	No	rpm		15		15	15	15	1	5	
	Rated life	K	h		6,000		6,000	6,000	6,000	6,0	000	
Allo	wable acceleration/deceleration torque	Ts1	Nm		1,225		6,370	7,840	9,800	17,	640	
Mo	omentary maximum allowable torque	Ts <sub>2</sub>	Nm		2,450		12,740	15,680	19,600	35,	280	
	Allowable output speed [Duty ratio: 100%] Note 2	Ns0	rpm		60		21.5	20	20	1	0	
	Backlash		arc.min.		1.5		1.0	1.0	1.0	1	.0	
	Lost motion		arc.min.		1.5		1.0	1.0	1.0	1.0		
Sta	artup efficiency (Reference Value)		%		65		75	75	70	70		
aring	Allowable moment Note 4	M01	Nm		1,764		12,740	20,580	24,500	44,100		
Sapacity of main bearing	Momentary maximum allowable moment	M02	Nm		3,528		25,480	39,200	58,800	88,	200	
ify of i	Maximum thrust load	F <sub>0</sub>	N	14,700			24,500	49,000	72,000	88,	200	
Capa	Allowable radial load	Wr	N	9,428			39,900	54,676	66,252	101	,754	
	Moment of inertia (I=GD²/4) out shaft conversion value <sup>Note 3</sup>		kgm²	8.98x10 <sup>-4</sup> / 8.92x10 <sup>-4</sup>	4.61x10 <sup>-4</sup> / 4.60x10 <sup>-4</sup>	4.02x10 <sup>-4</sup> / 4.01x10 <sup>-4</sup>	5.76x10 <sup>-3</sup>	3.40x10 <sup>-3</sup>	4.05x10 <sup>-3</sup>	1.16x10 <sup>-2</sup>	1.14x10 <sup>-2</sup>	
Rep	peated positioning accuracy (ref.	value)	arc.sec	ec ±5 ±5 ±5			±5	±5	±5	ASK ASK		
	Mass		kg	45 / 40 1			165 / 129	290 / 315	290	48	30	


Note: 1. The Rating Table shows the specification values of each individual reduction gear.

- 2. The allowable output speed may be limited by heat depending on the operating rate. Make sure that the surface temperature of the reduction gear does not exceed 60°C during use.
- 3. The inertia moment value is for the reduction gear. It does not include the inertia moment for the input gear.
- 4. The allowable moment will differ depending on the thrust load. Check the allowable moment diagram (p. 37).
- 5. For the moment rigidity and torsional rigidity, refer to the calculation of tilt angle and the torsion angle (p. 39).
- 6. The rated torque is the value that produces the rated service life based on operation at the rated output speed; it does not indicate the maximum load. Refer to "Glossary" (p. 27) and "Product selection flowchart" (p. 28).
- 7. The specifications above are based on Nabtesco evaluation methods; this product should only be used after confirming that it is appropriate for the operating conditions of your system.

# External dimensions Reduction gear main unit

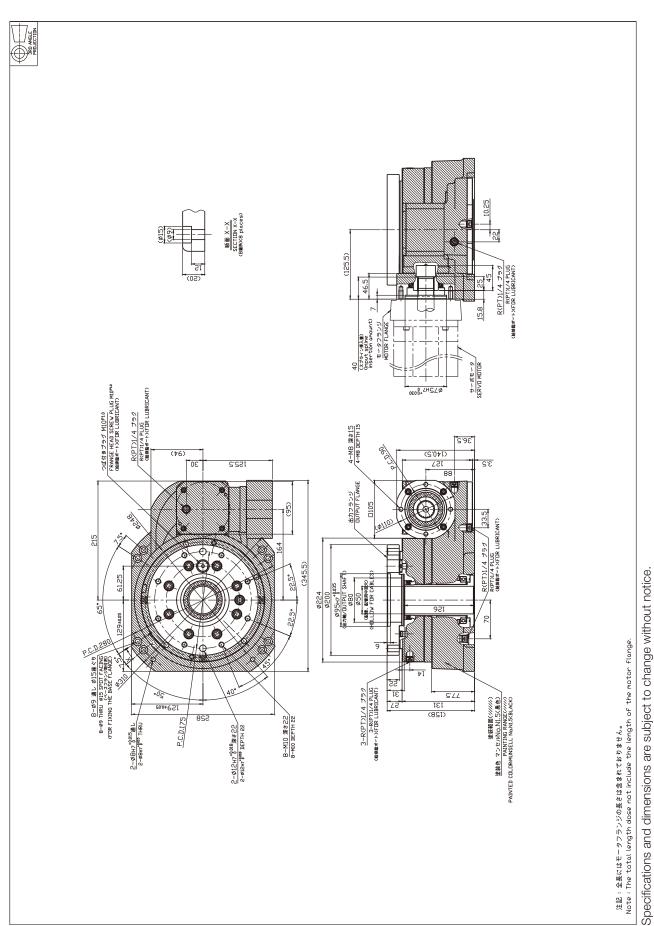


**38-50A** 

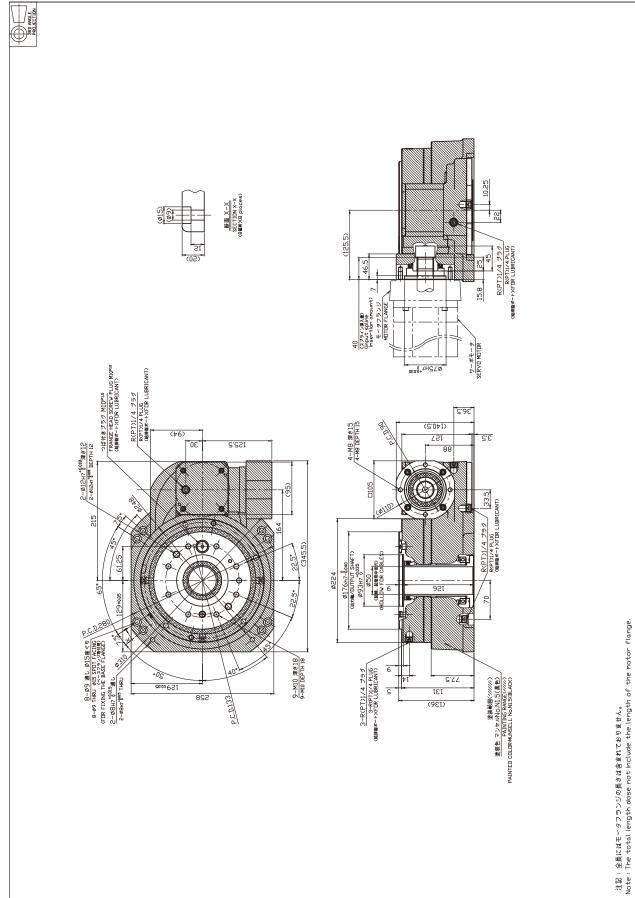

Specifications and dimensions are subject to change without notice.

注記:全長にはモータフランジの長さは含まれておりません。 Note : The total length dose not include the length of the motor flange.


Specifications and dimensions are subject to change without notice.

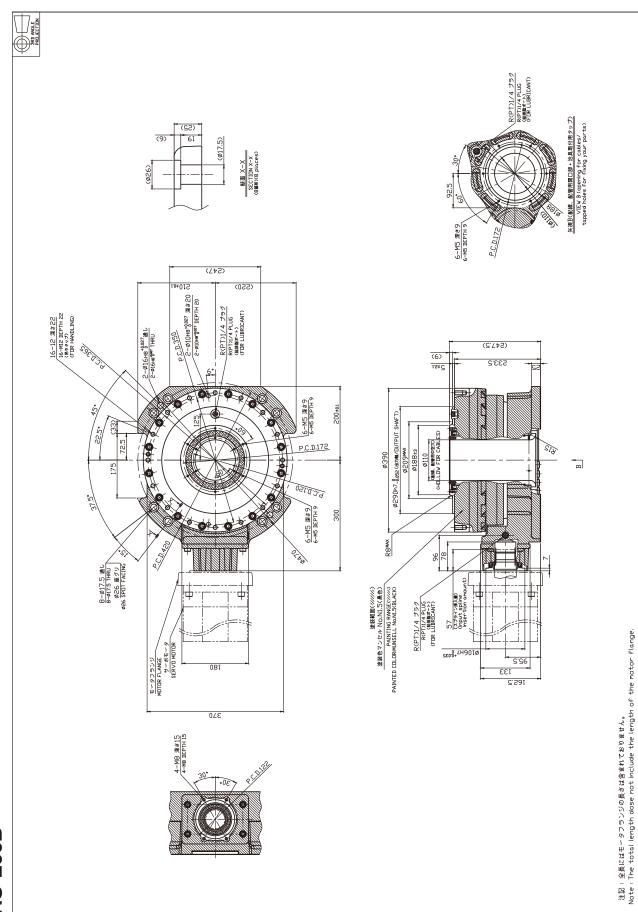

Specifications and dimensions are subject to change without notice.

**RS-320A** 

Specifications and dimensions are subject to change without notice.

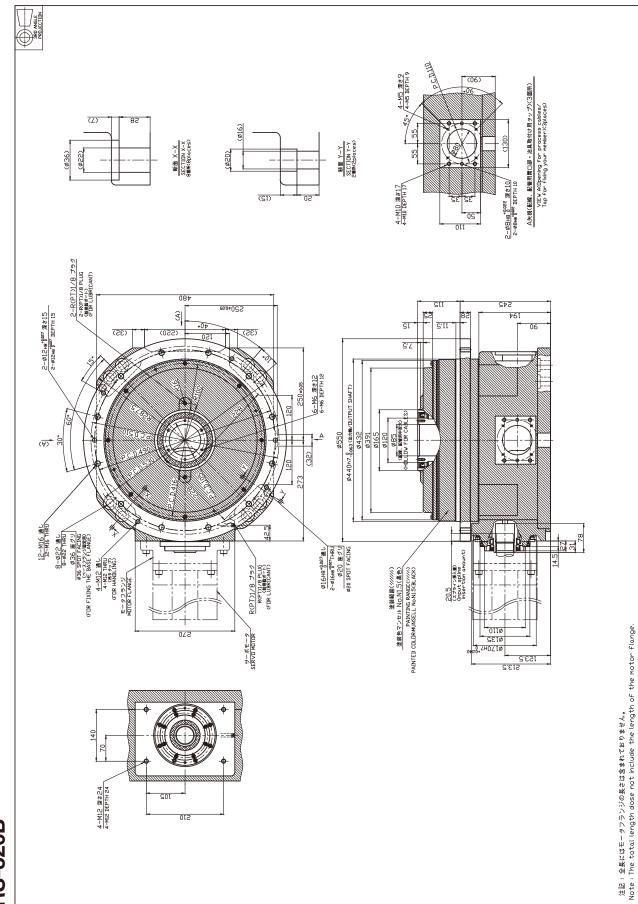


Specifications and dimensions are subject to change without notice.

RS-400A

Specifications and dimensions are subject to change without notice.


注記:全長にはモータフランジの長さは含まれておりません。 Note : The total length dose not include the length of the motor flange.

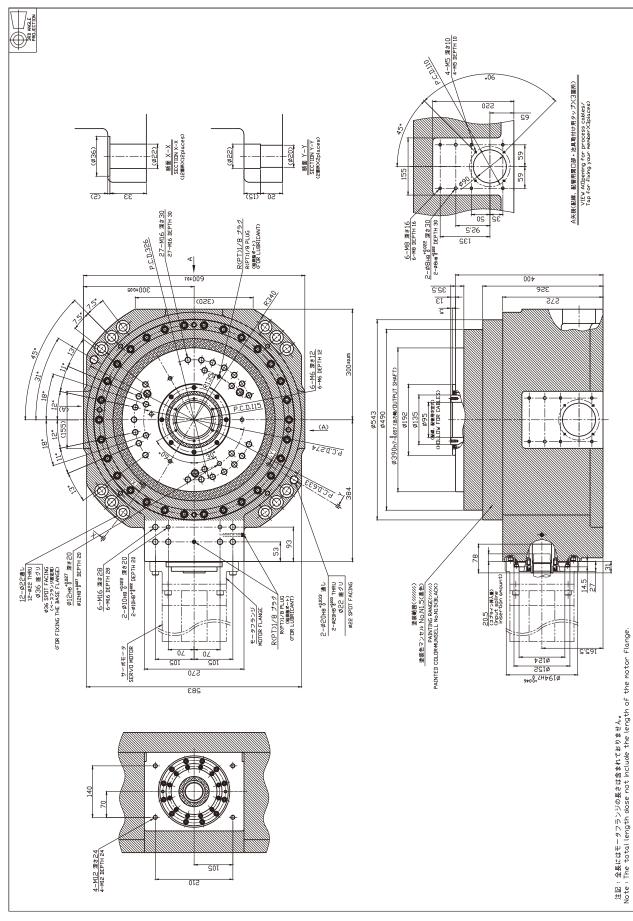

Specifications and dimensions are subject to change without notice.

# External dimensions Input spline

# Straight shaft (with key)

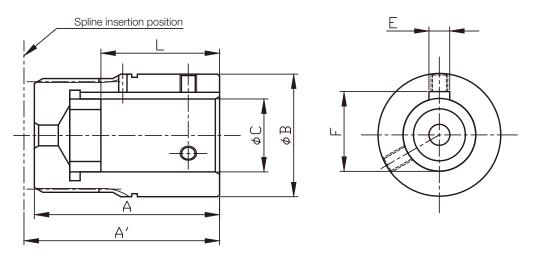


Model	Code	Order item				Input splii	ne dimensions	(mm)				Inertia moment I (I=GD²/4)
		number	Α	A'*	øB		øС	L		E	F	Input shaft equivalent (kgm²)
	VXD	30WA140D*	77	74.5 to 79.5	40	19H7	+0.021 0	37	6	±0.015	21.8	8.74×10 <sup>-5</sup>
	VXE	30WA140E*	77	72.5 to 79.5	40	22H7	+0.021 0	34	8	±0.018	25.3	8.77×10 <sup>-5</sup>
RS-50A	VXF	30WA140F*	83	79.5 to 85.5	40	24H7	+0.021 0	43	8	±0.018	27.3	9.55×10 <sup>-5</sup>
RS-50B	VXH	30WA140H*	70	65.5 to 72.5	30	14	+0.030 +0.012	22	5	±0.015	16.3	4.14×10 <sup>-5</sup>
	VXJ	30WA140J*	68	63.5 to 70.5	30	17H7	+0.018 0	28	5	±0.015	19.3	3.90×10 <sup>-5</sup>
	VXP	30WA140P*	72	67.5 to 74.5	30	16H7	+0.018 0	27	5	±0.015	18.3	4.19×10 <sup>-5</sup>
	WXS	60WA140-*	87	85.5 to 87.5	59	32H7	+0.025 0	45	10	±0.018	35.3	6.69×10 <sup>-4</sup>
RS-260A	WXB	60WA140B*	89	87.5 to 90	59	35	+0.035 +0.010	72	10	±0.018	38.3	6.40×10 <sup>-4</sup>
RS-260B	WB2	60WA423B*	89	87.5 to 90	59	35	+0.035 +0.010	57	10	±0.018	38.3	6.65×10 <sup>-4</sup>
	WXC	60WA140C*	83	81.5 to 83.5	59	28H7	+0.021 0	49	8	±0.018	31.3	6.48×10 <sup>-4</sup>
	YXA	67WA422A*	68	64 to 72	45	28H7	+0.021 0	52	8	±0.018	31.3	2.44×10 <sup>-4</sup>
	YXD	67WA422D*	68	64 to 72	45	28H7	+0.021 0	52	10	±0.018	31.3	2.44×10 <sup>-4</sup>
	YXF	67WA140F*	145	150 to 159	56	38H7	+0.025 0	66.5	10	±0.018	41.3	7.47×10 <sup>-4</sup>
	YXG	67WA140G*	95	113.5 to 120.5	55	32H7	+0.025 0	45	10	±0.018	35.3	5.01×10 <sup>-4</sup>
	YXK	67WA140K*	109	126.5 to 133.5	60	35H7	+0.025 0	55	10	±0.018	38.3	7.11×10 <sup>-4</sup>
RS-320A RS-320B	YXL	67WA140L*	81	98.5 to 105.5	55	32	+0.043 +0.018	31	10	±0.018	35.3	4.17×10⁻⁴
RS-400A RS-900A	YXM	67WA140M*	57	74.5 to 81.5	45	24	+0.034 +0.013	23	8	±0.018	27.3	2.26×10 <sup>-4</sup>
	YXN	67WA140N*	109	126.5 to 133.5	60	35	+0.035 +0.010	55	10	±0.018	38.3	7.11×10 <sup>-4</sup>
	YXP	67WA140P*	89	106.5 to 113.5	45	24H7	+0.021 0	55	8	±0.018	27.3	3.18×10 <sup>-4</sup>
	YXQ	67WA140Q*	144.5	162 to 169	60	35H7	+0.025 0	55	10	±0.018	38.3	9.38×10 <sup>-4</sup>
	YXR	67WA140R*	125	142.5 to 149.5	60	35	+0.035 +0.010	70	10	±0.018	38.3	8.43×10 <sup>-4</sup>
	YS2	67WA140S*	142	159.5 to 166.5	60	42H7	+0.025 0	80	12	±0.0215	45.3	8.89×10 <sup>-4</sup>

<sup>\*</sup> Ensure that length A' of the spline insertion position is within the range indicated in the table above.

# External dimensions Input spline


# Straight shaft (without key)

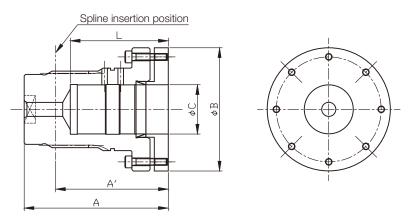

Model	Code	Order item		Input		Inertia moment I (I=GD²/4)	Transmission torque			
		number	А	A'*	øΒ		øС	L	Input shaft equivalent (kgm²)	Nm
	VXA	30WA421A*	79	72.5 to 81.5	68	24	+0.021 0	39	4.11×10 <sup>-4</sup>	77.8
	VXB	30WA421B*	68	63.5 to 70.5	63	19	+0.021 0	45	2.40×10 <sup>-4</sup>	52.4
RS-50A	VXC	30WA421C*	77	72.5 to 79.5	68	22	+0.021 0	45	4.09×10 <sup>-4</sup>	68.7
RS-50B	VXK	30WA421K*	77	70.5 to 79.5	63	24	+0.021 0	37	2.40×10 <sup>-4</sup>	77.8
	VXQ	30WA421Q*	73	66.5 to 75.5	63	19	+0.021 0	36	2.48×10 <sup>-4</sup>	52.4
	VQ2	30WA431Q*	73	66.5 to 75.5	63	19	+0.021 0	30	2.48×10 <sup>-4</sup>	52.4
RS-260A	WXD	60WA421D*	103	86.5 to 88.5	88	35	+0.035 +0.010	70	1.52×10 <sup>-3</sup>	106.5
RS-260B	WD2	60WA431D*	103	86.5 to 88.5	88	35	+0.035 +0.010	55	1.53×10 <sup>-3</sup>	106.5
	YXB	67WA421B*	86	86 to 92	75	35	+0.035 +0.010	73	7.34×10 <sup>-4</sup>	106.5
RS-320A RS-320B	YXC	67WA421C*	82	84.5 to 87	75	32H7	+0.025 0	33	7.55×10 <sup>-4</sup>	170.8
RS-400A RS-900A	YE2	67WA421E*	86	86 to 92	75	35	+0.035 +0.010	58	7.48×10 <sup>-4</sup>	106.5
	YXH	67WA421H*	144	140.5 to 149.5	77	42H7	+0.025 0	62	9.73×10 <sup>-4</sup>	277.3
RS-900A	ZS2	96WA421-*	149	143.5 to 152.5	110	55H7	+0.030 0	53	3.83×10 <sup>-3</sup>	657

<sup>\*</sup> Ensure that length A' of the spline insertion position is within the range indicated in the table above.


# 1/10 tapered shaft

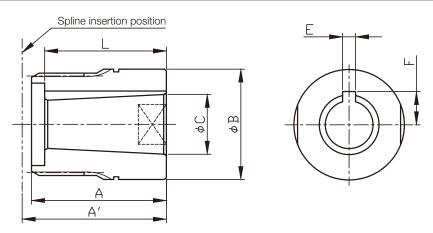


Model	Code	Order item		Input spline dimensions (mm)										
		number	Α	A'*	øΒ	øС		L E		F	Input shaft equivalent (kgm²)			
RS-50A	VXL	30WA422L*	64	59.5 to 66.5	30	14	+0.10 0	18	4	+0.040 +0.010	8.75	3.75×10 <sup>-5</sup>		
RS-50B	VXM	30WA422M*	62	57.5 to 64.5	30	16	+0.10 0	28	5	+0.040 +0.010	9.5	3.57×10 <sup>-5</sup>		
RS-260A	WXA	60WA140A*	72	73.5 to 75.5	59	32	+0.10 0	65	7	+0.049 +0.013	17.75	5.08×10 <sup>-4</sup>		
RS-260B	WXE	60WA140E*	89	87.5 to 90	59	35	+0.10 0	57	6	+0.2 +0.1	18.85	6.53×10 <sup>-4</sup>		
RS-320A RS-320B	YXS	67WA140-*	60	54 to 69.5	50	32	+0.10 0	60	7	+0.08 +0.043	17.75	2.06×10 <sup>-4</sup>		
RS-400A RS-900A	YXE	67WA140E*	81	81.5 to 87.5	50	35	+0.10 0	55	6	+0.040 +0.010	18.55	2.74×10 <sup>-4</sup>		

 $<sup>^{\</sup>star}$  Ensure that length A' of the spline insertion position is within the range indicated in the table above.

# External dimensions Motor flange

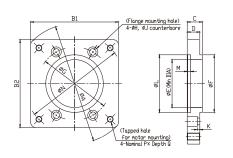

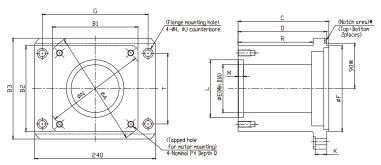

\*For RS-320A, 320B have notch area.

For RS-50A, 50B, RS-260A, 260B

For RS-320A, 320B, 400A, RS-900A

Model	Code	Order item		Flange	outer dir	mension	s (mm)			Re	eduction g	ear mou	ınting di	mensio	ns (mm)		N	lotor mour	nting din	nension	s (mm)	
Wiodei	Oude	number	øΑ	B1 B2	B3	R	С	D	øE	e	F	G	T	øΗ	øJ	K	0		М	øN	Р	Q
	CA	35PA203CA*	111.4	ø111.4			41	36	69								50	+0.036 +0.011	3.5	70	M5	9
	СВ	35PA203CB*	108	ø108			41	36	69								70	+0.037 +0.012	5.5	90	M5	9
	СС	35PA203CC*	108	ø108			41	36	69								70	+0.037 +0.012	5.5	90	M6	11
	CD	35PA203CD*	144	□129			43	38	69								80	+0.037 +0.012	6	100	M6	11
	CE	35PA203CE*	144	□129			43	38	69								95	+0.038 +0.013	6	115	M6	11
	CF	35PA203CF*	144	□129			43	38	69								95	+0.038 +0.013	6	115	M8	15
	CG	35PA203CG*	176	□130			45	40	69								110	+0.038 +0.013	7	135	M8	15
	СН	35PA203CH*	176	□130			45	40	69								110	+0.038 +0.013	11	145	M8	15
RS-50A	CJ	35PA203CJ*	176	□130	_	_	60	55	69	75h7	0	90	_	9	14	22	110	+0.038 +0.013	7	145	M8	15
RS-50B	СК	35PA203CK*	232	□176			45	40	69		-0.030	**		-			114.3	+0.038 +0.013	5	200	M12	22
	CL	35PA203CL*	232	□176			45	40	69								115	+0.038 +0.013	6	165	M8	15
	СМ	35PA203CM*	232	□176			45	40	69								130	+0.039 +0.014	6	165	M10	18
	CN	35PA203CN*	295	□220			45	40	69								200	+0.040 +0.015	6	235	M12	22
	СР	35PA203CP*	176	□130			50	45	69								80	+0.037 +0.012	6	100	M6	11
	CQ	35PA203CQ*	144	□129			48	43	69								95	+0.038	6	115	M8	15
	CR	35PA203CR*	170	□130			53	48	69								110	+0.038	11	145	M8	15
	СТ	35PA203CT*	176	□130			45	40	69								110	+0.038	7	130	M8	15
	CU	35PA203CU*	111.4	ø111.4			41	36	67								60	+0.037	3.5	75	M5	9
	GA	35PA203GA*	144	□129			43	38	96								95	+0.038	7	115	M8	15
	GB	35PA203GB*	176	□130			45	40	96								110	+0.038	7	135	M8	15
	GC	35PA203GC*	176	□130			45	40	96								110	+0.038 +0.013 +0.038	7	145	M8	15
	GD	35PA203GD*	233	□176			45	40	96								114.3	+0.039	5	200	M12	22
	GE	35PA203GE*	233	□176			45	40	96								130	+0.014	6	165	M10	18
RS-260A RS-260B	GF	35PA203GF*	295	□220	-	-	45	40	96	106h7	0 -0.035	122	-	9	14	22	200	+0.015	6	235	M12	22
	GG	35PA203GG*	170	□130 170			55	50	96								110	+0.013	7	145	M8	15
	GH	35PA203GH*	232	□176			55	50	96								114.3	+0.013	5	200	M12	22
	GJ	35PA203GJ*	170	□130			50	45	96								110	+0.013	7	145	M8	15
	GK	35PA203GK*	175	□130			45	40	96								110	+0.013	7	130	M8	15
	GL	35PA203GL*	144	□129			43	38	80								80	+0.012	6	100	M6	11
	GQ	35PA203GQ*	295	□220			45	40	96								180	+0.014	6	215	M12	22

	0.1	Order item			Flange	outer di	mension	s (mm)			Re	eduction g	ear mou	ınting di	mensio	ns (mm)		Motor mounting dimensions (mm)					
Model	Code	number	øΑ	B1	B2	B3	R	С	D	øE	Ø	F	G	Т	øΗ	øJ	K	ø	L	М	øN	Р	Q
	YS	67WA203-*	247	<sub>-1</sub> :	74	174	36.5	65.5	61.5	114.3						-	25	114.3H7	+0.035 0	10	200	M12	24
	YA	67WA203A*	238	<sub>-1</sub>	74	174	44.5	75.5	71.5	114.3							25	114.3H7	+0.035 0	10	200	M12	24
	YB	67WA203B*	318	240	2:	20	-	75.5	71.5	148							25.5	200H7	+0.046 0	10	235	M12	24
	YC	67WA203C*	318	240	2	20	-	85.5	81.5	148							25.5	200H7	+0.046 0	10	235	M12	24
	YD	67WA203D*	245	□18	30	200	149	180	176	114.3						20		114.3H7	+0.035 0	10	200	M12	24
RS-320A RS-320B	YE	67WA203E*	318	240	2	20	-	124	120	148	170h7	0	210	140	13			200H7	+0.046 0	10	235	M12	24
RS-400A	YG	67WA203G*	318	240	2	20	-	80	76	148	170117	-0.040	210	140				200H7	+0.046 0	10	235	M12	24
	YH	67WA203H*	306	240	20	00	-	110	106	114.3							25	114.3H7	+0.035 0	10	200	M12	24
	YJ	67WA203J*	310	ø18	30	220	75	104	100	110						- 2	25	110H7	+0.035 0	10	145	M8	16
	YK	67WA203K*	306	240	20	00	-	139	135	114.3								114.3H7	+0.035 0	10	200	M12	24
	YL	67WA203L*	245	<sub>-18</sub>	30	200	134	165	161	114.3						20		114.3H7	+0.035 0	10	200	M12	24
	YM	67WA203M*	198	<sub>-1</sub>	45	200	5	79.5	75.5	130					13.5			130	+0.054 +0.014	10	165	M10	18
	ZA	96WA203A*	238	<sub>-1</sub>	74	200	34.5	65.5	61.5	114.3								114.3H7	+0.035 0	10	200	M12	24
	ZB	96WA203B*	247	<sub>-18</sub>	30	200	134	165	161	114.3							25	114.3H7	+0.035 0	10	200	M12	24
	ZC	96WA203C*	259	176	20	00	48.5	79.5	75.5	114.3					13			114.3H7	+0.035 0	10	200	M12	24
RS-900A	ZD	96WA203D*	313	240	2	13		80.5	76.5	180	194h7	0 -0.046		140		20	25.5	200H7	+0.046 0	10	235	M12	24
	ZE	96WA203E*	238	□13	74	200	79.5	110.5	106.5	114.3							25	114.3H7	+0.035 0	10	200	M12	24
	ZF	96WA203F*	318	240	2	20	-	85.5	81.5	175					13.5	13.5	25.5	200H7	+0.046 0	10	235	M12	24
	ZH	96WA203H*	307	240	2	13	-	124.5	120.5	180					13.3		25	200H7	+0.046 0	10	235	M12	24



# Considering the use of the RS series

This product features high precision and high rigidity, however, it is necessary to strictly comply with various restrictions and make considerations to maximize the product's features. Please read this technical document thoroughly and select and adopt an appropriate model based on the actual operating environment, method, and conditions at your facility.

### **Export**

When this product is exported from Japan, it may be subject to the export regulations provided in the "Foreign
Exchange Order and Export Trade Control Order". Be sure to take sufficient precautions and perform the required
export procedures in advance if the final operating party is related to the military or the product is to be used in the
manufacture of weapons, etc.

# **Application**

• If failure or malfunction of the product may directly endanger human life or if it is used in units which may injure the human body (atomic facilities, space equipment, medical equipment, safety units, etc.), examination of individual situations is required. Contact our agent or nearest business office in such a case.

# Safety measures

Although this product has been manufactured under strict quality control, a mistake in operation or misuse can
result in breakdown or damage, or an accident resulting in injury or death. Be sure to take all appropriate safety
measures, such as the installation of independent safeguards.

# Product specifications indicated in this catalog

• The specifications indicated in this catalog are based on Nabtesco evaluation methods. This product should only be used after confirming that it is appropriate for the operating conditions of your system.

# **Operating environment**

Use the reduction gear under the following environment:

- · Location where the ambient temperature is within the range from -10°C to 40°C.
- · Location where the humidity is less than 85% and no condensation occurs.
- · Location where the altitude is less than 1000 m.
- · Well-ventilated location

Do not install the reduction gear at the following locations.

- · Locations where a lot of dust is collected.
- $\cdot$  Outdoor areas that are directly affected by wind and rain
- · Locations near to areas that contains combustible, explosive, or corrosive gases and flammable materials.
- · Locations that are heated due to heat transfer and radiation from peripherals and direct sun.
- Locations where the performance of the motor can be affected by magnetic fields or vibration.
- Note 1: If the required operating environment cannot be established/met, contact us in advance.
  - 2: When using the reduction gear under special conditions (clean room, equipment for food, concentrated alkali, high-pressure steam, etc.), contact our agent or nearest business office in advance.

### Maintenance

• The standard replacement time for lubricant is 20,000 hours. However, when operation involves a reduction gear surface temperature above 40°C, the state of degradation of the lubricant should be checked in advance of that and the grease replaced earlier as necessary.

### Reduction gear temperature

When the reduction gear is used under high load and at a high duty ratio, it may overheat and the surface
temperature may exceed the allowable temperature. Be aware of conditions so that the surface temperature of the
reduction gear does not exceed 60°C while it is in operation. There is a possibility of damage (to the product) if the
surface temperature exceeds 60°C.

### Reduction gear output rotation angle

• When the range of the rotation angle is small (10 degrees or less), the service life of the reduction gear may be reduced due to poor lubrication or the internal parts being subject to a concentrated load.

Note: Contact us in case the rotation angle is 10 degrees or less.

### **Manuals**

• Safety information and detail product instructions are indicated in the operation manual. The operation manual can be downloaded from the following website.

### https://precision.nabtesco.com/

# **Glossary**

### Rated service life

The lifetime resulting from the operation with the rated torque and the rated output speed is referred to as the "rated service life".

### Allowable acceleration/deceleration torque


When the machine starts or stops, the load torque to be applied to the reduction gear is larger than the constant-speed load torque due to the effect of the inertia torque of the rotating part. In such a situation, the allowable torque during acceleration/ deceleration is referred to as "allowable acceleration/ deceleration torque".

**Note:** Be careful that the load torque, which is applied at startup and stop, does not exceed the allowable acceleration/deceleration torque.

### Momentary maximum allowable torque

A large torque may be applied to the reduction gear due to execution of emergency stop or by an external shock. In such a situation, the allowable value of the momentary applied torque is referred to as "momentary maximum allowable torque".

**Note:** Be careful that the momentary excessive torque does not exceed the momentary maximum allowable torque.

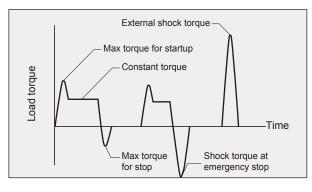

### Allowable output speed

The allowable value for the reduction gear's output speed during operation without a load is referred to as the "allowable output speed".

Notes: Depending on the conditions of use (duty ratio, load, ambient temperature), the reduction gear temperature may exceed 60°C even when the speed is under the allowable output speed. In such a case, either take cooling measures or use the reduction gear at a speed that keeps the surface temperature at 60°C or lower.


### Duty ratio

The duty ratio is defined as the ratio of the sum total time of acceleration, constant speed, and deceleration to the cycle time of the reduction gear.

### Torsional rigidity, lost motion, backlash

When a torque is applied to the output shaft while the input shaft is fixed, torsion is generated according to the torque value. The torsion can be shown in the hysteresis curves. The value of b/a is referred to as "torsional rigidity". The torsion angle at the mid point of the hysteresis curve width within ±3% of the rated torque is referred to as "lost motion". The torsion angle when the torque indicated by the hysteresis curve is equal to zero is referred to as "backlash".

<Hysteresis curve>

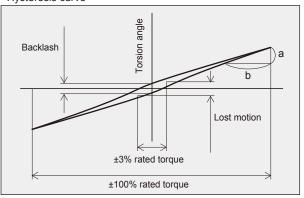

### Startup efficiency

The efficiency of the moment when the reduction gear starts up is referred to as "startup efficiency".

### No-load running torque (input shaft)

The torque for the input shaft that is required to run the reduction gear without load is referred to as "no-load running torque".

### Allowable moment and maximum thrust load


The external load moment may be applied to the reduction gear during normal operation. The allowable values of the external moment and the external axial load at this time are each referred to as "allowable moment" and "maximum thrust load".

### Momentary maximum allowable moment

A large moment may be applied to the reduction gear due to an emergency stop or external shock. The allowable value of the momentary applied moment at this time is referred to as "momentary maximum allowable moment."

Note: Be careful so that the momentary excessive moment does not exceed the momentary maximum allowable moment.

# **Product selection flowchart**

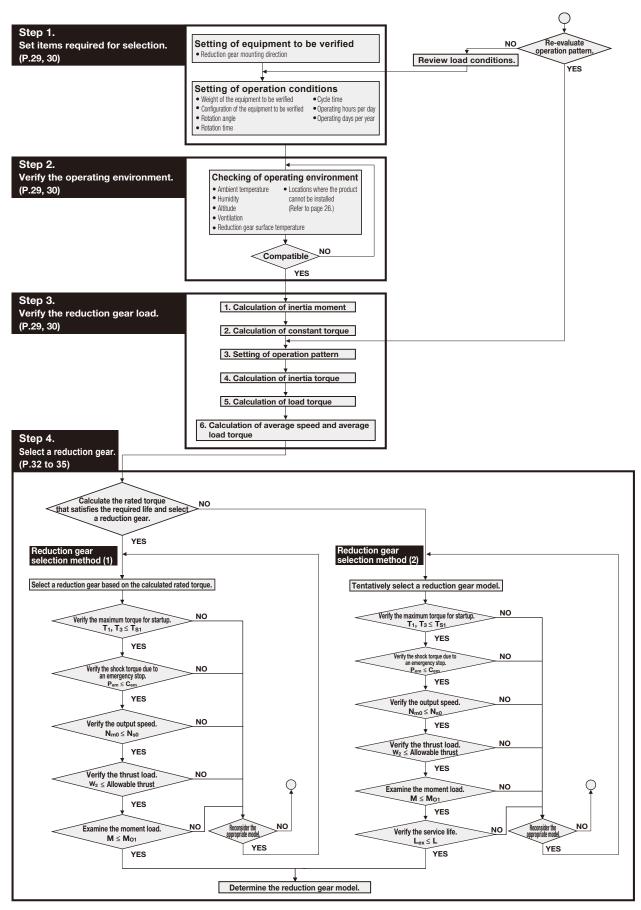

A limitation is imposed on the motor torque value according to the momentary maximum allowable torque of the selected reduction gear. (Refer to page 36.)

# **Product selection**

# Model code selection examples


# With horizontal rotational transfer

# Step 1. Set the items required for selection.

Setting item	Setting
Reduction gear mounting direction	Vertical shaft installation
Equipment weight to be considered	
W <sub>A</sub> Disk weight (kg)	2,000
W <sub>B</sub> Work weight (kg)	100×4 pieces
Equipment configuration to be consider	ed
D <sub>1</sub> — Disk: D dimension (mm)	1,200
a Workpiece: a dimension (mm)	100
b Workpiece: b dimension (mm)	300
D <sub>2</sub> — Workpiece: P.C.D. (mm)	1,000
Operation conditions	
$\theta$ ———Rotation angle (°)*1	180
$[t_1+t_2+t_3]$ ——Rotation time (s)	2.5
[t <sub>4</sub> ] ———— Cycle time (s)	20
Q <sub>1</sub> ——— Equipment operation hours pe	er day (hours/day) 12
Q <sub>2</sub> ———Equipment operation days pe	r year (days/year) 365

<sup>\*1.</sup> When the range of the rotation angle is small (10 degrees or less), the rating life of the reduction gear may be reduced due to poor lubrication or the internal parts being subject to a concentrated load.


# Reduction gear Fixing component Reduction gear Motor flange Fixing component Reduction gear Fixin

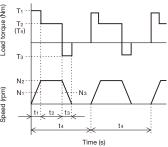

### Step 2. Verify the operating environment.

Checkpoint	Standard value
S <sub>0</sub> Ambient temperature (°C)	-10 to +40
S <sub>1</sub> ———— Reduction gear surface temperature (°C)	60 or less

Note: Refer to "Operating environment" on p. 26 for values other than those listed above.

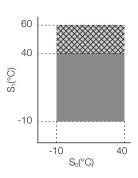

# Step 3-1. Examine the reduction gear load

	Setting item	Calculation formula	Selection examples
(1) Calculate the	inertia moment based the calculat	ion formula on page 42.	
I <sub>R</sub>	Load inertia moment (kgm²)	$\begin{split} I_{R1} = & \frac{W_{A} \times \left(\frac{D_{1}}{2 \times 1,000}\right)^{2}}{2} \\ I_{R2} = & \left[\frac{W_{B}}{12} \left(\frac{a}{1,000}\right)^{2} + \left(\frac{b}{1,000}\right)^{2}\right] + W_{B} \times \left(\frac{D_{2}}{2 \times 1,000}\right)^{2}\right] \times n \\ I_{R1} = & \text{Disk inertia moment} \\ I_{R2} = & \text{Work inertia} \\ I_{R} = & I_{R1} + I_{R2} \\ n = & \text{Number of Workpieces} \end{split}$	$\begin{split} I_{R1} &= \frac{2,000 \times \left(\frac{1,200}{2 \times 1,000}\right)^2}{2} \\ &= 360 \text{ (kgm²)} \\ I_{R2} &= \left[\frac{100}{12} \left\{ \left(\frac{100}{1,000}\right)^2 + \left(\frac{300}{1,000}\right)^2 \right\} + 100 \times \left(\frac{1,000}{2 \times 1,000}\right)^2 \right] \times 4 \\ &= 103.3 \text{ (kgm²)} \\ I_{R} &= 360 + 103.3 \\ &= 463.3 \text{ (kg m²)} \end{split}$
(2) Examine the c	constant torque.		
T <sub>R</sub>	Constant torque (Nm)	$\begin{split} &T_{R}\!=\!(W_{\!A}\!+\!W_{\!B})\!\times 9.8\times\frac{D_{\!In}}{2\!\times\!1,000}\!\times\!\mu\\ &\mu\!=\!\text{Friction factor} \\ &\text{Note: Use 0.015 for this example as the load}\\ &\text{is applied to the bearing of the}\\ &\text{Precision Reduction Gear RV}^{\text{TM}}.\\ &D_{\!In}\!=\!\text{Rolling diameter: Use the pilot diameter}\\ &\text{which is almost equivalent}\\ &\text{to the rolling diameter in}\\ &\text{this selection calculation.} \\ &\text{Note: If the reduction gear model is not determined,}\\ &\text{select the following pilot diameter:}\\ &\text{Maximum pilot diameter: 490 (mm)}\\ &\text{(RS-900A)} \end{split}$	$T_R = (2,000 + 100 \times 4) \times 9.8 \times \frac{490}{2 \times 1,000} \times 0.015$ = 86.4 (Nm)

Step 3-2: Proceed to p. 31.

# **Product selection**

# Model code selection examples


# With vertical rotational transfer


# Step 1. Set the items required for selection.

Setting item	Setting
Reduction gear mounting direction	Horizontal shaft installation
Equipment weight to be considered	
W <sub>C</sub> ———Mounted work weight (kg)	2,000
Equipment configuration to be considered	
a ———— a dimension (mm)	500
b ——— b dimension (mm)	500
R R dimension (mm)	320
Operation conditions	
$\theta$ ———— Rotation angle (°)*1	90
$[t_1+t_2+t_3]$ — Rotation time (s)	1.5
[t <sub>4</sub> ] ———— Cycle time (s)	20
Q <sub>1</sub> Equipment operation hours per day (hours/day)	24
Q <sub>2</sub> ———— Equipment operation days per year (days/year)	365

<sup>\*1.</sup> When the range of the rotation angle is small (10 degrees or less), the rating life of the reduction gear may be reduced due to poor lubrication or the internal parts being subject to a concentrated load.

# Servomotor Reduction gear Motor flange Reduction gear Fixing component Equipment to be examined (Movable section)

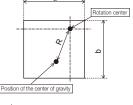

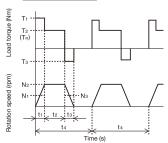

# Step 2. Verify the operating environment.

Checkpoint	Standard value
S <sub>0</sub> ———— Ambient temperature (°C)	-10 to +40
S <sub>1</sub> ———— Reduction gear surface temperature (°C)	60 or less

Note: Refer to "Operating environment" on p. 26 for values other than those listed above.

60 40 -10 -10 S<sub>0</sub>(°C)

### Step 3-1. Examine the reduction gear load.

			3 <sub>0</sub> ( O)
	Setting item	Calculation formula	Selection examples
(1) Calculate the	inertia moment.		
I <sub>R</sub>	Load inertia moment (kgm²)	$I_{R} = \frac{W_{C}}{12} \times \left[ \left( \frac{a}{1,000} \right)^{2} + \left( \frac{b}{1,000} \right)^{2} \right] + W_{C} \times \left( \frac{R}{1,000} \right)^{2}$	$I_{R} = \frac{2000}{12} \times \left\{ \left( \frac{500}{1,000} \right)^{2} + \left( \frac{500}{1,000} \right)^{2} \right\} + 2,000 \times \left( \frac{320}{1,000} \right)^{2}$ $= 288.1 \text{ (kgm²)}$
(2) Examine the	constant torque.		
T <sub>R</sub>	Constant torque (Nm)	$T_{R} = W_{C} \times 9.8 \times \frac{R}{1,000}$	$T_{R} = 2,000 \times 9.8 \times \frac{320}{1,000}$ = 6,272 (Nm)

Step 3-2: Proceed to p. 31.

(Refer to "With horizontal rotational transfer" for selection examples.)

Step 3-2. Set items required for selection.

	Setting item	Calculation formula	Selection examples (With horizontal rotational transfer
(1) Set the	e acceleration/deceleration time, con	stant-speed operation time, and output speed.	
t <sub>1</sub>	——— Acceleration time (s)	The operation pattern does not need to be verified if it is already set. If the operation pattern has not been determined, use the following formula to calculate the reference operation pattern.	Examine the operation pattern using N <sub>2</sub> = 15 rpm as the reduction gear output speed is unknown. $t_1 = t_3 = 2.5 - \frac{180}{\left(\frac{15}{60} \times 360\right)} = 0.5 \text{ (s)}$
t <sub>2</sub>	Constant-speed operation time (s)	$t_1 = t_3 = \text{Rotation } [t_1 + t_2 + t_3] - \frac{\theta}{\left(\frac{N_2}{60} \times 360\right)}$ $t_2 = \text{Rotation } [t_1 + t_2 + t_3] - (t_1 + t_3)$	$ \frac{\left(\frac{13}{60} \times 360\right)}{\left(60 \times 360\right)} $ $ t_2 = 2.5 - (0.5 + 0.5) = 1.5 \text{ (s)} $
t <sub>3</sub>	Deceleration time (s)	Note: 1. Assume that $t_1$ and $t_3$ are the same. Note: 2. $N_2 = 15$ rpm if the reduction gear output speed ( $N_2$ ) is not known.	$t_1 = t_3 = 0.5$ (s) $t_2 = 1.5$ (s)
N <sub>2</sub>	Constant speed (rpm)	Note: 3. If t <sub>1</sub> and t <sub>3</sub> is less than 0, increase the output speed or extend the rotation time.	N <sub>2</sub> = 15 (rpm)
N <sub>1</sub>	Average speed for startup (rpm)	$N_1 = \frac{N_2}{2}$	$N_1 = \frac{15}{2} = 7.5 \text{ (rpm)}$
	Average speed for stop (rpm)	$N_3 = \frac{N_2}{2}$	$N_3 = \frac{15}{2} = 7.5 \text{ (rpm)}$
(2) Calcul	ate the inertia torque for acceleration.	/deceleration.	
T <sub>A</sub>	Inertia torque for acceleration (Nm)	$T_A = \left\{\frac{I_{R} \times (N_2 - 0)}{t_1}\right\} \times \frac{2\pi}{60}$	$T_{A} = \left\{ \frac{463.3 \times (15 - 0)}{0.5} \right\} \times \frac{2\pi}{60}$ = 1,455 (Nm)
T <sub>D</sub>	Inertia torque for deceleration (Nm)	$T_{D} = \left\{ \frac{I_{R} \times (0 - N_{2})}{t_{3}} \right\} \times \frac{2\pi}{60}$	$T_{D} = \left\{ \frac{463.3 \times (0-15)}{0.5} \right\} \times \frac{2\pi}{60}$ $= -1,455 \text{ (Nm)}$
(3) Calcul	ate the load torque for acceleration/c	leceleration.	
T <sub>1</sub>	Maximum torque for startup (Nm)	T <sub>1</sub> =  T <sub>A</sub> +T <sub>R</sub>   T <sub>R</sub> : Constant torque With horizontal rotational transfer Refer to page 29 With vertical rotational transfer Refer to page 30	T <sub>1</sub> =  1,455 +86.4   = 1,541.4 (Nm)
T <sub>2</sub>	Constant maximum torque (Nm)	$T_2 =  T_R $	T <sub>2</sub> = 86.4 (Nm)
T <sub>3</sub>	Maximum torque for stop (Nm)	T <sub>3</sub> =  T <sub>D</sub> +T <sub>R</sub>   T <sub>R</sub> : Constant torque With horizontal rotational transfer Refer to page 29 With vertical rotational transfer Refer to page 30	T <sub>3</sub> = -1,455 +86.4   =1,368.6 (Nm)
(4)-1 Calc	culate the average speed.		
	—— Average speed (rpm)	$N_{m} = \frac{t_{1} \times N_{1} + t_{2} \times N_{2} + t_{3} \times N_{3}}{t_{1} + t_{2} + t_{3}}$	$N_{m} = \frac{0.5 \times 7.5 + 1.5 \times 15 + 0.5 \times 7.5}{0.5 + 1.5 + 0.5}$ $= 12 \text{ (rpm)}$
(4)-2 Calc	culate the average load torque.		
T <sub>m</sub>	—— Average load torque (Nm)	$T_{m} = \sqrt[13]{t_{1} \times N_{1} \times \overline{t_{1}}^{\frac{10}{3}} + t_{2} \times N_{2} \times \overline{t_{2}}^{\frac{3}{3}} + t_{3} \times N_{3} \times \overline{t_{3}}^{\frac{3}{3}}} $ $t_{1} \times N_{1} + t_{2} \times N_{2} + t_{3} \times N_{3}$	$T_{m} = \sqrt[3]{0.5 \times 7.5 \times 1,541.4} \frac{10}{4.3 + 1.5 \times 15 \times 86.4} \frac{10}{3} + 0.5 \times 7.5 \times 1,368.6} \frac{10}{3}$ $= 963.9 \text{ (Nm)}$

Go to page 32 if the reduction gear model is verified based on the required life. Go to page 34 if the service life is verified based on the reduction gear model.

# **Product selection**

# Model code selection examples

# Step 4. Select a reduction gear.

Reduction gear selection method (1) Calculate the required torque based on the load conditions and required life and select a reduction gear.

	etting/verification item	Calculation formula	Selection examples (With horizontal rotational transfer)
(1) Calculate	the rated torque for the reduction	gear that satisfies the required life.	
L <sub>ex</sub> ——	- Required life (year)	Based on the operation conditions	20 years
Q <sub>1cy</sub>	Number of cycles per day (times)	$Q_{toy} = \frac{Q_1 \times 60 \times 60}{t_4}$	$Q_{tcy} = \frac{12 \times 60 \times 60}{20}$ = 2,160 (times)
Q <sub>3</sub> ———	Operating hours of reduction gear per day (h)	$Q_3 = \frac{Q_{toy} \times (t_1 + t_2 + t_3)}{60 \times 60}$	$Q_3 = \frac{2,160 \times (0.5 + 1.5 + 0.5)}{60 \times 60}$ =1.5 (h)
Q <sub>4</sub> —	Operating hours of reduction gear per year (h)	$Q_4 = Q_3 \times Q_2$	Q <sub>4</sub> =1.5×365 =548 (h)
L <sub>hour</sub> —	Reduction gear service life (h)	$Lhour = Q_4 \times L_ex$	Lhour = 548 × 20 = 10,960 (h)
T <sub>O</sub> '	Reduction gear rated torque — that satisfies the required life (Nm)	$\begin{split} &T_0{}^{!} = T_m \times \frac{(10)}{3} \sqrt{\frac{L_{hour}}{K} \times \frac{N_m}{N_0}} \\ &K : \text{Reduction gear rated life (h)} \\ &N_0 : \text{Reduction gear rated output speed (rpm)} \end{split}$	To' = 963.9 $\times {\binom{10}{3}} \sqrt{\frac{10,980}{6,000} \times \frac{12}{15}}$ = 1.080 (Nm)
(2) Tentatively	y select a reduction gear model ba	used on the calculated rated torque.	
Tentative sele	ection of the reduction gear	Select a reduction gear for which the rated torque of the reduction gear $[\Gamma_0]^{-1}$ is equal to or greater than the rated torque of the reduction gear that satisfies the required life $[\Gamma_0]^{-1}$ .  *1 $[\Gamma_0]$ : Refer to the rating table on page 10.	RS-260A that meets the following condition is tentatively selected: $\label{eq:robonic} [T_0]\ 2,548\ (Nm) \geq [T_0']\ 1.080\ (Nm)$
(3) Verify the	maximum torque for startup and s	stop.	
Verification of and stop	of maximum torque for startup	Check the following conditions: The allowable acceleration/deceleration torque $[T_{s1}]^{-1}$ is equal to or greater than the maximum starting torque $[T_{s1}]^{-2}$ and maximum stopping torque $[T_{s1}]^{-2}$ If the tentatively selected reduction gear is outside of the specifications, change the reduction gear model.  *1 $[T_{s1}]$ : Refer to the rating table on page 10.	$ [T_{s1}] \ 6,370 \ (Nm) \ge [T_1] \ 1,541.4 \ (Nm) $ $ [T_3] \ 1,368.6 \ (Nm) $ According to the above conditions, the tentatively selected model should be no problem.
(1) Varify tha	output speed.	*2 [T <sub>1</sub> ] and [T <sub>3</sub> ]: Refer to page 31.	
	Average speed per cycle (rpm)	$N_{\text{MO}} = \frac{t_1 \times N_1 + t_2 \times N_2 + t_3 \times N_3}{t_4}$	$N_{m0} = \frac{0.5 \times 7.5 + 1.5 \times 15 + 0.5 \times 7.5}{20}$ $= 1.5 \text{ (rpm)}$
Verification o	of output speed	Check the following condition: The allowable output speed $[N_{s0}]^{*1}$ is equal to or greater than the average speed per cycle $[N_{m0}]$ If the tentatively selected reduction gear is outside of the specifications, change the reduction gear model. Contact us regarding use of the model at a speed outside the allowable output speed $[N_{s0}]^{*1}$ . Note: The value of $[N_{s0}]$ is the speed at which the case temperature is balanced at $60^{\circ}\text{C}$ for 30 minutes.	$[N_{S0}]\ 21.5\ (rpm)\geq [N_{m0}]\ 1.5\ (rpm)$ According to the above condition, the tentatively selected model should be no problem.
		*1 [Nso] and [Ns1]: Refer to the rating table on page 10.	

# Reduction gear selection method (1) Calculate the required torque based on the load conditions and required life and select a reduction gear.

	Setting/verification item	Calculation formula	Selection examples (With horizontal rotational transfer
5) Verify t	he shock torque at the time of an em	nergency stop.	
P <sub>em</sub> ——	Expected number of emergency stop times (times)	Based on the operation conditions.	For example, an emergency stop occurs once a month. [P <sub>em</sub> ] = 1 x 12 x required life (year) [L <sub>ex</sub> ] = 12×20=240 (times)
Tem —	Shock torque due to an emergency stop (Nm)	oad torque (Mm)	For example, [T <sub>em</sub> ] = 5,000 (Nm)
l <sub>em</sub> —	Speed at the time of an emergency stop (rpm)	-T <sub>em</sub>	For example, [N <sub>em</sub> ] = 15 (rpm)
tem ——	Deceleration time at the time of an emergency stop (s)	Set the operation conditions that meet the following requirement: Shock torque due to an emergency stop [Tem] is equal to or less than the momentary maximum allowable torque [Tsz]	For example, [t <sub>em</sub> ] = 0.05 (s)
<u>7</u> 4 ———	Number of pins for reduction gear	Model   Number of pins (Z4)	Number of pins for RS-260A: 60
C <sub>em</sub> —	Allowable number of shock torque application times	$C_{em} = \frac{775 \times \left(\frac{T_{S2}}{T_{em}}\right)^{\frac{10}{3}}}{Z_4 \times \frac{N_{em}}{60} \times t_{em}}$ Note [T <sub>s2</sub> ]: Momentary maximum allowable torque, refer to the rating table on page 10.	$C_{em} = \frac{775 \times \left(\frac{12,740}{5,000}\right)^{\frac{10}{3}}}{60 \times \frac{15}{60} \times 0.05} = 23,347 \text{ (times)}$
/erificatio emergend	n of shock torque due to an cy stop	Check the following condition: The allowable shock torque application count [Cem] is equal to or greater than the expected emergency stop count [Pem]  If the tentatively selected reduction gear is outside of the specifications, change the reduction gear model.	$\label{eq:condition} [C_{em}]~23,347 \geq [P_{em}]~240$ According to the above condition, the tentatively selected model should be no problem.
6) Verify t	he thrust load and moment load.	Specifications, change the reduction gear model.	
V <sub>1</sub>	R adial load (N)	Output shaft mounting surface	0 (N)
	Distance to the point of radial load application (mm)	w <sub>1</sub>	0 (mm)
V <sub>2</sub>	—— Thrust load (N)	€2 W2 €6 €6	In this example, $ W_2 = W_A + W_B = (2,000 + 100 \times 4) \times 9.8 $ $= 23,520 \text{ (N)} $ Note $W_A, W_B$ : Refer to page 29.
2 ——	Distance to the point of thrust load application (mm)		0 (mm) (As the workpiece center is located on the rotatio axis)
л ——	—— Moment load (Nm)	$M = \frac{W_1 \times (\ell + a) + W_2 \times \ell_2}{1,000}$ a: Refer to the calculation of the tilt angle on page 39.	RS-260A As dimension a = 232.4 (mm): $M = \frac{0 \times (0 + 232.4) + 23,520 \times 0}{1,000}$ = 0 (Nm)
erify the	thrust load and moment load	Check that the thrust load and moment load are within the range in the allowable moment diagram on page 37.  When radial load W <sub>1</sub> is applied within dimension b, use the reduction gear within the allowable radial load.  Wr. Allowable radial load, see the rating table on page 10.  If the tentatively selected reduction gear is outside of the specifications, change the reduction gear model.	For this example, Thrust load [ $W_2$ ] = 23,520 (N) Moment load [M] = 0 (N) As the above values are within the range in the allowable moment diagram, the tentatively selected model should to problem.
The actua	<u> </u>	all the conditions of the above verification items. d on the motor speed, input torque, and inertia	Based on the above verification result, RS-260A is selected.

# **Product selection**

# Model code selection examples

Setting/verification item	d (2): Tentatively select a reduction gea	Selection examples (With horizontal rotational transfer)
(1) Tentatively select a desired reduction gear r	nodel.	
Tentative selection of a reduction gear	Tentatively select a desired reduction gear model.	For example, tentatively select RS-260A.
(2) Verify the maximum torque for startup and		
Verification of maximum torque for startup and stop	Check the following conditions: The allowable acceleration/deceleration torque [T <sub>51</sub> ] <sup>*1</sup> is equal to or greater than the maximum starting torque [T <sub>1</sub> ] <sup>*2</sup> and maximum stopping torque [T <sub>3</sub> ] <sup>*2</sup> If the tentatively selected reduction gear is outside of the specifications, change the reduction gear model.  *1 [T <sub>51</sub> ]: Refer to the rating table on page 10.	$[T_{s1}] \ 6,370 \ (Nm) \geq [T_1] \ 1,541.4 \ (Nm)$ $[T_3] \ 1,368.6 \ (Nm)$ According to the above conditions, the tentatively selected model should be no problem.
(3) Verify the output speed.	*2 [T <sub>1</sub> ] and [T <sub>3</sub> ]: Refer to page 31.	
N <sub>m0</sub> — Average speed per cycle (rpm)	$N_{m0} = \frac{t_1 \times N_1 + t_2 \times N_2 + t_3 \times N_3}{t_4}$	$N_{m0} = \frac{0.5 \times 7.5 + 1.5 \times 15 + 0.5 \times 7.5}{20}$ $= 1.5 \text{ (rpm)}$
Verification of output speed	Check the following condition: The allowable output speed $[N_{s0}]^{-1}$ is equal to or greater than the average speed per cycle $[N_{m0}]$ If the tentatively selected reduction gear is outside of the specifications, change the reduction gear model.	[N <sub>s0</sub> ] 21.5 (rpm) ≥ [N <sub>m0</sub> ] 1.5 (rpm)
	Contact us regarding use of the model at a speed outside the allowable output speed [Nso] $^{1}$ . Note: The value of [Nso] is the speed at which the case temperature is balanced at 60°C for 30 minutes.	According to the above condition, the tentatively selected model should be no problem.
	*1 [N <sub>S0</sub> ] and [N <sub>S1</sub> ]: Refer to the rating table on page 10.	
(4) Verify the shock torque at the time of an em	nergency stop.	-  -
P <sub>em</sub> Expected number of emergency stop times (times)	Based on the operation conditions.	For example, an emergency stop occurs once a month.  [P <sub>em</sub> ] = 1 x 12 x required life (year) [L <sub>ex</sub> ]  = 12×20=240 (times)
T <sub>em</sub> Shock torque due to an emergency stop (Nm)	Load torque (Nm)	For example, [T <sub>em</sub> ] = 500 (Nm)
N <sub>em</sub> Speed at the time of an emergency stop (rpm)	op Be G	For example, [N <sub>em</sub> ] = 15 (rpm)
t <sub>em</sub> Deceleration time at the time of an emergency stop (s)	Set the operation conditions that meet the following requirement: Shock torque due to an emergency stop [Tem] is equal to or less than the momentary maximum allowable torque [Tsz]	For example, $[t_{em}] = 0.05$ (s)
Z <sub>4</sub> Number of pins for reduction gear	Model   Number of pins (Z <sub>4</sub> )	Number of pins for RS-260A: 60
C <sub>em</sub> Allowable number of shock torque application times	$\begin{split} C_{em} = & \frac{775 \times \left(\frac{T_{S2}}{T_{em}}\right)^{\frac{10}{3}}}{Z_4 \times \frac{N_{em}}{60} \times t_{em}} \\ \text{Note} & \text{ [T}_{s2]: Momentary maximum allowable torque, refer to the rating table on page 10.} \end{split}$	$C_{\text{em}} = \frac{775 \times \left(\frac{1,225}{500}\right)^{\frac{10}{3}}}{40 \times \frac{15}{60} \times 0.05} = 30,729 \text{ (times)}$
Verification of shock torque due to an emergency stop	Check the following condition: The allowable shock torque application count [Cem] is equal to or greater than the expected emergency stop count [Pem]  If the tentatively selected reduction gear is outside of the	$\label{eq:condition} [C_{em}]~23,347 \geq [P_{em}]~240$ According to the above condition, the tentatively selected model should be no problem.

Setting/verification item	Calculation formula	Selection examples (With horizontal rotational transfer)
(5) Verify the thrust load and moment load.		
W <sub>1</sub> ——— Radial load (N)	Output shaft mounting surface	O (N)
ℓ — Distance to the point of radial load application (mm)	W <sub>1</sub>	0 (mm)
W <sub>2</sub> ——— Thrust load (N)	<b>₽</b>	$W_2 = W_A + W_B = (2,000 + 100 \times 4) \times 9.8$ = 23,520 (N) Note WA, WB: Refer to page 29.
$\ell_2 -\!$	W <sub>2</sub>	0 (mm) (As the workpiece center is located on the rotation axis)
M — Moment load (Nm)	$M = \frac{W_1 \times (\ell + a) + W_2 \times \ell_2}{1,000}$ a: Refer to the calculation of the tilt angle on page 39.	RS-260A As dimension a = 232.4 (mm): $M = \frac{0 \times (0 + 232.4 ) + 23,520 \times 0}{1,000}$ = 0 (Nm)
Verify the thrust load and moment load	Check that the thrust load and moment load are within the range in the allowable moment diagram on page 37.  When radial load W <sub>1</sub> is applied within dimension b, use the reduction gear within the allowable radial load.  Wr. Allowable radial load, see the rating table on page 10.  If the tentatively selected reduction gear is outside of the specifications, change the reduction gear model.	For this example, Thrust load $[W_2] = 2,548$ (N) Moment load $[M] = 0$ (N) As the above values are within the range in the allowable moment diagram, the tentatively selected model should be no problem.
(6) Verify the reduction gear service life.		
L <sub>h</sub> — Life (h)	$L_h = 6,000 \times \frac{N_0}{N_m} \times \left(\frac{T_0}{T_m}\right)^{\frac{10}{3}}$	$L_{h} = 6,000 \times \frac{15}{12} \times \left(\frac{2,548}{963.9}\right)^{\frac{10}{3}}$ $= 191,552(h)$
Q <sub>1cy</sub> — Number of cycles per day (times)	$Q_{tcy} = \frac{Q_1 \times 60 \times 60}{t_4}$	$Q_{1cy} = \frac{12 \times 60 \times 60}{20} = 2,160 \text{ (times)}$
Q <sub>3</sub> — Operating hours per day (h)	$Q_3 = \frac{Q_{1cy} \times (t_1 + t_2 + t_3)}{60 \times 60}$	$Q_3 = \frac{2,160 \times (0.5+1.5+0.5)}{60 \times 60} = 1.5 \text{ (h)}$
Q <sub>4</sub> — Operating hours per year (h)	$Q_4 = Q_3 \times Q_2$	Q <sub>4</sub> = 1.5 × 365 = 548 (h)
L <sub>year</sub> — Reduction gear service life (year)	$L_{year} = \frac{L_h}{Q_4}$	$L_{year} = \frac{191,552}{548} = 349.5 \text{ (year)}$
L <sub>ex</sub> ——— Required life (year)	Based on the operation conditions	20 years
Verification of the service life	Check the following condition: $\lfloor L_{ex} \rfloor$ is equal to or less than $\lfloor L_{year} \rfloor$ If the tentatively selected reduction gear is outside of the specifications, change the reduction gear model.	$\label{eq:Lexplicit} $[L_{ex}]$ 20 (year) $\le [L_{year}]$ 349.5 (year)$ According to the above condition, the tentatively selected model should be no problem.$
	all the conditions of the above verification items. d on the motor speed, input torque,and inertia	Based on the above verification result, RS-260A is selected.

### **Product selection**

# Model code selection examples


#### Limitation on the motor torque


A limitation is imposed on the motor torque value so that the shock torque applied to the reduction gear does not exceed the momentary maximum allowable torque.


Setting/verification item	Calculation formula	Selection examples (With horizontal rotational transfer)
T <sub>M1</sub> Motor momentary maximum torque (Nm)	Determine based on the motor specifications.	For example, $T_{M1} = 90$ (Nm)
Maximum torque generated at the TM10UT —— output shaft for the reduction gear (Nm)	$T_{M1out} = T_{M1} \times R \times \frac{100}{\eta}$ R: Actual reduction ratio	For example, calculate the maximum torque generated at the output shaft for the reduction gear based on the specifications when RS-260A-120 was selected. $T_{M1out} = 90\times 120\times \frac{100}{75}$
(When an external shock is applied at the time of an emergency stop or motor stop)	$\eta$ : Startup efficiency (%) ,refer to the rating table on page 10.	= 14,400 (Nm)
Maximum torque generated at the output shaft for the reduction gear (Nm)  (When a shock is applied to the output shaft due to hitting by an obstacle)	$T_{M2out} = T_{M1} \times R \times \frac{\eta}{100}$	$T_{M2out} = 10 \times 120 \times \frac{75}{100}$ = 8,100 (Nm)
Limitation on motor torque value	Check the following condition: The momentary maximum allowable torque [Ts2]*1 is equal to or greater than the maximum torque generated at the output shaft for the reduction gear [TM10uT] and [TM20uT] If the above condition is not satisfied, a limitation is imposed on the maximum torque value of the motor.  *1 [Ts2]: Refer to the rating table on page 10.	$ [T_{S2}] \ 12,740 \ (Nm) \le [T_{M1OUT}] \ 14,400 \ (Nm) \ and \\ [T_{M2OUT}] \ 8,100 \ (Nm) $ According to the above condition, the torque limit is set for the motor.

### **Product selection**

# Allowable moment diagram

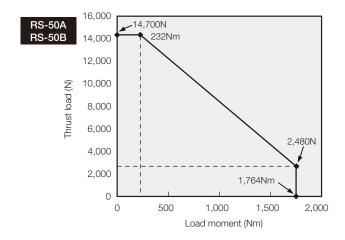

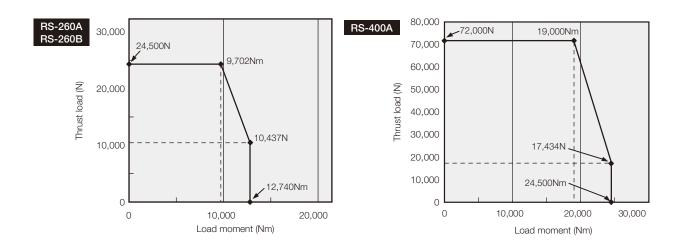


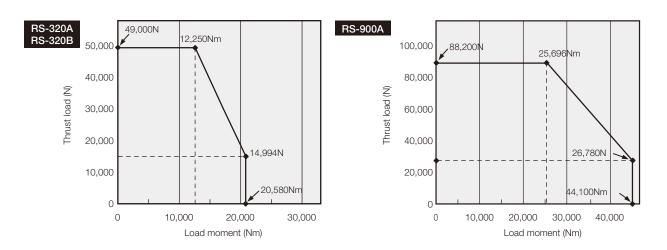

When the load moment and the axial load are applied concurrently, ensure that the reduction gear is used within the corresponding allowable moment range, which is indicated in the allowable moment diagram.

### **Technical data**

# No-load running torque

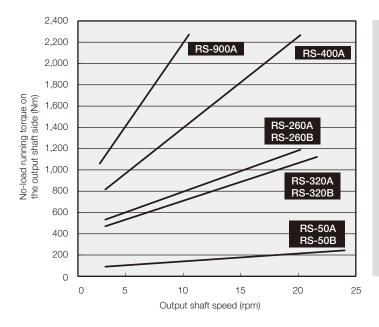

The no-load running torque that is converted to the input shaft side value should be calculated using the following equation:

No-load running torque on the input shaft side (Nm) =

No-load running torque on the output shaft side (Nm)

Speed ratio

(Measurement conditions)

Case temperature: 20°C

Lubricant:

RVGREASE™ LB00

(RS-50A, RS-50B, RS-260A, RS-260B, RS-400A)

Molywhite RE00

(RS-320A, RS-320B, RS-900A)

### **Technical data**

## Calculation of tilt angle and torsion angle

#### Calculation of tilt angle

When a load moment occurs with an external load applied, the output shaft will tilt in proportion to the load moment (If \( \extit{\mathbb{l}} \) is larger than b) The moment rigidity indicates the rigidity of the main bearing, and it is represented by the load moment value required for tilting the main bearing by 1 arc.min.

: Tilt angle of the output shaft (arc.min.)


: Moment rigidity (Nm/arc.min.)

 $\theta = \begin{array}{c} \frac{W_1\ell_1 + W_2\ell_2}{M_1 \times 10^3} \\ \end{array} \begin{array}{c} \frac{IW_1}{W_1, W_2} : \text{Load (N)} \\ \ell_1, \ell_2 : \text{Distance to the point of load} \end{array}$ application (mm)

 $: \ell + \frac{b}{2} + a - b$ 

: Distance from the output shaft installation surface to the point of load application (mm)

	Moment rigidity	Dimensions (mm)		
Model	Reference value (Nm/arc.min.)	а	b	
RS-50A	1,960	28.4	187.1	
RS-50B	1,900	50.4	107.1	
RS-260A	8,320	232.4	319.3	
RS-260B	0,320	232.4	319.3	
RS-320A	12.740	268.5	376.4	
RS-320B	12,740	168.5	370.4	
RS-400A	19,600	264.2	369.8	
RS-900A	37,730	325.4	433.4	

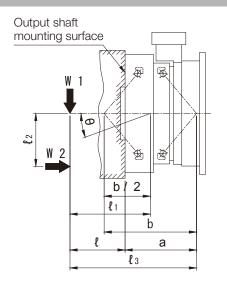

#### Calculation of torsion angle

Calculate the torsion angle when the torque is applied in a single direction, using an example of RS-260A.

1) When the load torque is 50 Nm.....Torsion angle ( $ST_1$ )

When the load torque is within the lost motion range

$$ST_1 = \frac{50}{76.4} \times \frac{1 \text{ (arc.min.)}}{2} = 0.33 \text{arc.min. or less}$$

2) When the load torque is 1,300 Nm.....Torsion angle (ST<sub>2</sub>)

When the load torque is within the rated torque range

$$ST_2 = \frac{1}{2} + \frac{2,100-76.4}{1,540} = 1.81$$
arc.min.

- Note: 1. The torsion angles that are calculated above are for a single reduction gear.
  - 2. Contact us for the customized specifications for lost motion.

	Torsional rigidity	Lost r	Backlash		
Model	Reference value (Nm/arc.min.)	Lost motion (arc.min.)	Measured torque (Nm)	(arc.min.)	
RS-50A	255	1.5	+14.7	1.5	
RS-50B	255	1.5	±14.7	1.0	
RS-260A	1,540		+76.4		
RS-260B	1,540		±70.4		
RS-320A	1,570	1.0	+94.1	1.0	
RS-320B	1,370	1.0	±94.1	1.0	
RS-400A	2,450		±117.6		
RS-900A	4,900		±264.6		

### **Design points**

### Reduction gear installation components

#### Installation of the reduction gear and mounting it to the output shaft

When installing the reduction gear and mounting it to the output shaft, use hexagon socket head cap screws and tighten to the torque, as specified below, in order to satisfy the momentary maximum allowable torque, which is noted in the rating table.

The use of the serrated lock washers are recommended to prevent the hexagon socket head cap screws from loosening and to protect the seat surface from flaws.

#### · Hexagon socket head cap screw

<Bolt tightening torque and tightening force>

Hexagon socket head cap screw	Tightening torque	Tightening force F	Bolt specification
nominal size x pitch (mm)	(Nm)	(N)	
M5 × 0.8	9.01 ± 0.49	9,310	Hexagon socket head cap screw
M6 × 1.0	15.6 ± 0.78	13,180	JIS B 1176: 2006
M8 × 1.25	37.2 ± 1.86	23,960	Strength class
M10 × 1.5	73.5 ± 3.43	38,080	JIS B 1051: 2000 12.9
M12 × 1.75	129 ± 6.37	55,100	Thread
M16 × 2.0	319 ± 15.9	103,410	JIS B 0209: 2001 6g
M18 × 2.5	441 ± 22.0	126,720	
M20 × 2.5	493 ± 24.6	132,170	

Note: 1. The tightening torque values listed are for steel or cast iron material.

If softer material, such as aluminum or stainless, is used, limit the tightening torque. Also take the transmission torque and load moment into due consideration.

<Calculation of allowable transmission torque of bolts>

	Т	Allowable transmission torque by tightening bolt (Nm)
$T = F \times \mu \times \frac{D}{2 \times 1,000} \times n$	F	Bolt tightening force (N)
	D	Bolt mounting P.C.D. (mm)
	μ	Friction factor
		μ=0.15: When lubricant remains on the mating face.
		μ=0.20: When lubricant is removed from the mating face.
	n	Number of bolts (pcs.)

#### • Serrated lock washer for hexagon socket head cap screw


Name: Belleville spring washer (made by Heiwa Hatsujyo Industry Co., Ltd.)

Corporation symbol: CDW-H

CDW-L (Only for M5)

Material: S50C to S70C Hardness: HRC40 to 48

		(Unit: mm)		
Nominal	Belle	OD of eville washer		
size	Ød	ØD	t	Н
5	5.25	8.5	0.6	0.85
6	6.4	10	1.0	1.25
8	8.4	13	1.2	1.55
10	10.6	16	1.5	1.9
12	12.6	18	1.8	2.2
16	16.9	24	2.3	2.8
18	18.9	27	2.6	3.15
20	20.9	30	2.8	3.55

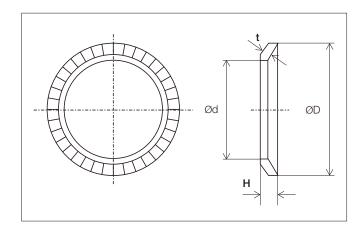

Note: When using any equivalent washer, select it with special care given to its outside diameter D.

#### Lubrication

- The standard lubrication method for the RS reduction gears is greasing.
  - Before the reduction gear is shipped, it is filled with our recommended grease. (For the brand of the pre-filled grease, refer to the following table.)
  - When operating a reduction gear filled with the appropriate amount of grease, the standard replacement time due to deterioration of the grease is 20,000 hours.
  - When using the gear with deteriorated grease or under an inappropriate ambient temperature condition (40°C or more), check the deterioration condition of the grease and determine the appropriate replacement cycle.
- Specified grease name

Model	RS-50A, RS-50B	RS-50A, RS-50B, RS-260A, RS-260B, RS-400A	RS-320A, RS-320B, RS-900A	
Lubricant code	SB	LB	MW	
Brand	RVOIL™ SB150	RVGREASE™ LB00	Molywhite RE00	
Manufacturer	Nabtesco Corporation			
Ambient temperature	-10 to 40°C			

• It is recommended that the running-in operation is performed.

Abnormal noise or torque variation may occur during operation due to the characteristics of the lubricant. There is no problem with the quality when the symptom disappears after the running-in operation is performed.

#### Requirements for equipment design

- If the lubricant leaks from the reduction gear or if the motor fails, the reduction gear must be removed. Design the equipment while taking this into consideration.
- As the center pipe at the center of the reduction unit is not designed to support a load, do not use the reduction gear in a way that applies a load to the center pipe. The oil seals may be deformed, which could eventually cause leakage of the lubricant.

#### Attention for lifting reduction gear

• Be sure that no load is applied to the center pipe or spline hole on the input unit when lifting. The oil seals on the output and/or input sides may become deformed, which could eventually cause leakage of the lubricant.


#### Reduction gear installation


Correct installation example


• For the horizontal shaft installation, do not install the reduction gear while the input shaft (motor) position faces upward. (Be sure to confirm that the input shaft position faces right, left, or downward during installation.)

Incorrect installation example

• If you intend to use the reduction gear attached to the ceiling, contact our customer representative.

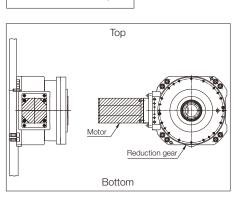

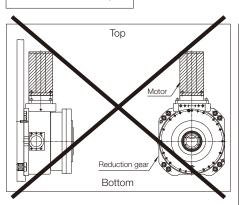

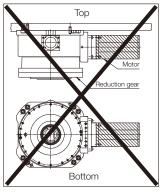

# Inertia moment calculation formula

Shape	l(kgm²)	Shape	I(kgm²)
1. Cylinder solid		6. Horizontal movement by conveyor	
$\begin{array}{c c} \underline{M(kg)} & Z & \overline{E} \\ \hline X & \overline{A(m)} & \overline{A(m)} \\ \hline A(m) & \overline{A(m)} & \overline{A(m)} \\ \hline \end{array}$	$I_x = \frac{1}{2} M R^2$ $I_y = \frac{1}{4} M \left( R^2 + \frac{a^2}{3} \right)$ $I_z = I_y$	$\underbrace{\frac{M_1(kg)}{M_2(kg)}}_{M_1(kg)}\underbrace{\frac{V(m/min)}{M_2(kg)}}_{N(rpm)}\underbrace{\frac{M_2(kg)}{M_4(kg)}}_{N(rpm)}$	$I = \left(\frac{M_1 + M_2}{2} + M_3 + M_4\right) \times R^2$
2. Cylinder hollow		7. Horizontal movement by lead screw	
M(kg) Z	$I_{x} = \frac{1}{2}M \left(R_{1}^{2} + R_{2}^{2}\right)$ $I_{y} = \frac{1}{4}M \left\{ \left(R_{1}^{2} + R_{2}^{2}\right) + \frac{a^{2}}{3}\right\}$ $I_{z} = I_{y}$	V(m/min) N(rpm) Lead: P(m/rev)	$I = \frac{M}{4} \left( \frac{V}{\pi \times N} \right)^2 = \frac{M}{4} \left( \frac{P}{\pi} \right)^2$
3. Oval cross section		8. Up/down movement by hoist	
M(kg)   Z   Y   E   E   E   E   E   E   E   E   E	$I_{x} = \frac{1}{16} M \left( b^{2} + c^{2} \right)$ $I_{y} = \frac{1}{4} M \left( \frac{c^{2}}{4} + \frac{a^{2}}{3} \right)$ $I_{z} = \frac{1}{4} M \left( \frac{b^{2}}{4} + \frac{a^{2}}{3} \right)$	M <sub>2</sub> (kg) N(rpm) V(m/min) M <sub>1</sub> (kg)	$I = M_1 R^2 + \frac{1}{2} M_2 R^2$
4. Rectangle $X \longrightarrow X \longrightarrow$	$I_{x} = \frac{1}{12} M (b^{2} + c^{2})$ $I_{y} = \frac{1}{12} M (a^{2} + c^{2})$ $I_{z} = \frac{1}{12} M (a^{2} + b^{2})$	9. Parallel axis theorem  M(kg)  Center axis  n(m)  Rotation axis	I = I <sub>0</sub> + Mη <sup>2</sup> I <sub>0</sub> : Moment of inertia of any object about an axis through its center of mass I: Moment of inertia about any axis parallel to the axis through its center of mass η: Perpendicular distance between the above two axes
5. General application  M(kg)  V(m/min)  R(m)  N(rpm)	$I = \frac{M}{4} \left( \frac{V}{\pi \times N} \right)^2 = MR^2$		

# **Troubleshooting checksheet**

Check the following items in the case of trouble like abnormal noise, vibration, or malfunctions.

When it is not possible to resolve an abnormality even after verifying the corresponding checkpoint, obtain a "Reduction Gear Investigation Request Sheet" from the download page in our Website, fill in the necessary information, and contact our Customer Support Center at Tsu Plant.

### [URL]: https://precision.nabtesco.com/

#### The trouble started immediately after installation of the reduction gear

Checked	Checkpoint
	Make sure the equipment's drive section (the motor side or the reduction gear output surface side) is not interfering with another component.
	Make sure the equipment is not under a greater than expected load (torque, moment load, thrust load).
	Make sure the required number of bolts are tightened uniformly with the specified tightening torque.
	Make sure the reduction gear, motor, or your company's components are not installed at a slant.
	Make sure the specified amount of Nabtesco-specified lubricant has been added.
	Make sure there are no problems with the motor's parameter settings.
	Make sure there are no components resonating in unity.
	Make sure the input gear is appropriately installed on the motor.
	Make sure there is no damage to the surface of the input gear teeth.
	Make sure the input gear specifications (precision, number of teeth, module, shift coefficient, dimensions of each part) are correct.
	Make sure the flange and other components are designed and manufactured with the correct tolerances.

#### The trouble started during operation

Checked	Checkpoint
	Make sure the equipment has not been in operation longer than the calculated service life.
	Make sure the surface temperature of the reduction gear is not higher than normal during operation.
	Make sure the operation conditions have not been changed.
	Make sure there are no loose or missing bolts.
	Make sure the equipment is not under a greater than expected load (torque, moment load, thrust load).
	Make sure the equipment's drive section is not interfering with another component.
	Make sure an oil leak is not causing a drop in the amount of lubricant.
	Make sure there are no external contaminants in the gear, such as moisture or metal powder.
	Make sure no lubricant other than that specified is being used.

▶ Area In North and South America / In Europe and Africa / In Asia and others / Germany: / Nagoya Office: FAX USA: 1-248-553-3070 / 49-211-364677 / 81-52-582-2987

### Order Information Sheet (Please complete the form below)


Date.

Company Name: Name:			Dept. Name:  E-mail:					
TEL.	-	-		FAX.	-	-		

### **◆** System configuration and selected motor

We would appreciate if you could provide your system configuration drawing that helps us to understand the speed, constant torque, and load inertia moment of the output shaft for the reduction gear.

#### **System configuration**

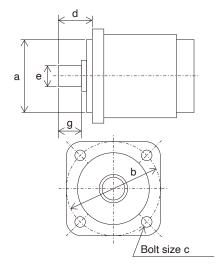


Motor model		а	Motor mounting pilot diameter (mm)	
Р	Motor rated output (KW)	b	Motor mounting bolt P.C.D (mm)	
Тмо	Motor rated torque (Nm)	С	Motor mounting bolt size (mm)	
T <sub>M1</sub>	Motor momentary maximum torque (Nm)	d	Motor shaft length (mm)	
<b>N</b> мо	Motor rated speed (rpm)	е	Motor shaft diameter (mm)	
		g	Motor shaft effective length (mm)	

#### ◆ Operation pattern (output shaft for the reduction gear)


and when it is attached, also inform us of its dimensions.

Please inform us of whether a key is attached or not,

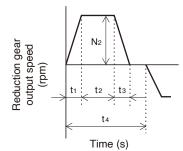

t <sub>1</sub>	Acceleration time (s)	
<b>t</b> 2	Constant speed operation time (s)	
t <sub>3</sub>	Deceleration time (s)	
t <sub>4</sub>	One operation cycle time (s)	
Q <sub>1CY</sub>	Number of operation cycles per day (times)	
Q <sub>2</sub>	Number of operating days per year (days)	
N <sub>2</sub>	Constant speed (rpm)	
T <sub>1</sub>	Max. torque for startup (Nm)	
<b>T</b> 2	Constant torque (Nm)	
Тз	Max. torque for stop (Nm)	

#### ◆ External load (output shaft for the reduction gear)

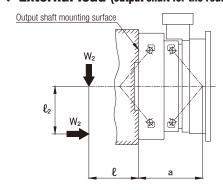

<b>W</b> <sub>1</sub>	Radial load (N)	
l	Distance to the point of radial load application (mm)	
W <sub>2</sub>	Axial load (N)	
<b>l</b> 2	Distance to the point of axial load application (mm)	

#### **Warranty**

- 1. In the case where Nabtesco confirms that a defect of the Product was caused due to Nabtesco's design or manufacture within the Warranty Period of the Product, Nabtesco shall repair or replace such defective Product at its cost. The Warranty Period shall be from the delivery of the Product by Nabtesco or its distributor to you ("Customer") until the end of one (1) year thereafter, or the end of two thousand (2,000) hours from the initial operation of Customer's equipment incorporating the Product at end user's production line, whichever comes earlier.
- 2. Unless otherwise expressly agreed between the parties in writing, the warranty obligations for the Product shall be limited to the repair or replacement set forth herein. OTHER THAN AS PROVIDED HEREIN, THERE ARE NO WARRATIES ON THE PRODUCT, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.
- 3. The warranty obligation under the Section 1 above shall not apply if:
  - a) the defect was caused due to the use of the Product deviated from the Specifications or the working conditions provided by Nabtesco;
  - b) the defect was caused due to exposure to foreign substances or contamination (dirt, sand etc.)
  - c) lubricant or spare part other than the ones recommended by Nabtesco was used in the Product;
  - d) the Product was used in an unusual environment (such as high temperature, high humidity, a lot of dust, corrosive/volatile/inflammable gas, pressurized/depressurized air, under water/liquid or others except for those expressly stated in the Specifications);
  - e) the Product was disassembled, re-assembled, repaired or modified by anyone other than Nabtesco;
  - f) the defect was caused due to the equipment into which the Product was installed;
  - g) the defect was caused due to an accident such as fire, earthquake, lightning, flood or others; or
  - h) the defect was due to any cause other than the design or manufacturing of the Product.
- 4. The warranty period for the repaired/replaced Product/part under the Section 1 above shall be the rest of the initial Warranty Period of the defective Product subjected to such repair/replace.



Europe and Africa Nabtesco Precision Europe GmbH

Tiefenbroicher Weg 15, 40472 Düsseldorf, Germany TEL: +49-211-173790 FAX: +49-211-364677 E-MAIL: info@nabtesco.de www.nabtesco.de

North and South America Nabtesco Motion Control Inc.

23976 Freeway Park Drive, Farmington Hills, MI 48335, USA

TEL: +1-248-553-3020 FAX: +1-248-553-3070

 $\hbox{E-MAIL: engineer@nabtescomotioncontrol.com} \quad www.nabtescomotioncontrol.com$ 

China Shanghai Nabtesco Motion-equipment Co., Ltd.

Room 1706, No. 388 Fu Shan Road, Pudong New Area, Shanghai 200122, China

TEL: +86-21-3363-2200 FAX: +86-21-3363-2655 E-MAIL: info@nabtesco-motion.cn www.nabtesco-motion.cn

India Nabtesco India Private Limited

Site No.485/9, 14th Cross, Peenya Industrial Area, 4th Phase, Bangalore -560 058 Karnataka India

TEL: +91-80-4123-4901 FAX: +91-80-4123-4903 E-MAIL: Nti\_pn@nabtesco.co.in www.nabtesco.co.in

Asia and others Nabtesco Corporation

Nagoya Sales Office

9th Fl, Nagoya 2nd Saitama Bldg., 2-28 Meieki 4-chome, Nakamura-ku, Nagoya 450-0002, Japan

TEL:+81-52-582-2981 FAX:+81-52-582-2987

**Customer Support Center** 

594 Icchoda, Katada-cho, Tsu, Mie 514-8533, Japan TEL: +81-59-237-4672 FAX: +81-59-237-4697

E-MAIL: P\_Information@nabtesco.com https://precision.nabtesco.com/ja/

- Nabtesco and RV are registered trademarks or trademarks of Nabtesco Corporation.
- Specifications are subject to change without notice.
- The PDF data of this catalog can be downloaded from the following website.

https://precision.nabtesco.com/

If any addition or modification is made to the published information, the PDF data may be updated before the printed catalog. Due to this, please note that some contents of the PDF data may be changed or revised from those in this catalog.

- Unauthorized reprinting, reproduction, copying, or translation of this catalog in whole or in part is strictly prohibited.
- © 2015 Nabtesco Corporation. All rights reserved.



















